






Installation Instructions 93003 Fabric Snap Kit

Installation Tips

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit, and could place occupants of the vehicle in a potentially dangerous situation.


Tools			
			
#2 Phillips Screwdriver	Hammer	Safety Glasses	Drill and 3/32" Bit
<p>CAUTION Safety glasses should be worn at all times when installing this product.</p>			

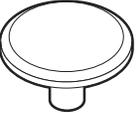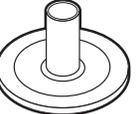Hardware and Parts			
			
Snap Die Qty. 1 Part # 138.44	Snap Punch Qty. 1 Part # 138.43	Button Qty. 10 Part # 154.46 - Black Qty. 10 Part #1.40 - Silver	
			
	Screw Qty. 10 Part # 9.69		
			
Stud Qty. 10 Part # 1.41	Stud, Low Profile Qty. 10 Part # 9.68	Socket Qty. 10 Part # 1.39	Eyelet Qty. 10 Part # 1.42

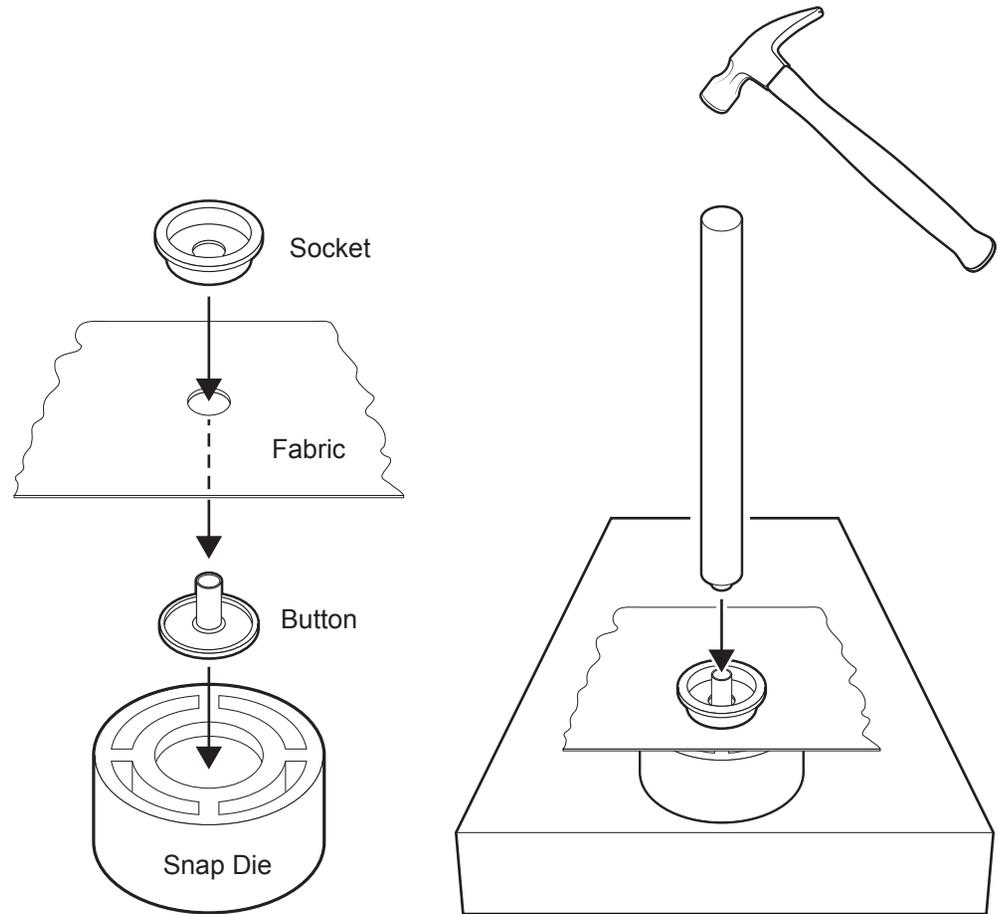


- Punch a hole in the fabric.
- Place the Snap Die on a firm surface.
- Place the Button in the smooth recess side of the Snap Die.
- Place the fabric hole over the post on the underside of the Button.
- Place a Socket over the button post.
- Place the nipple end of the Snap Punch on top of the button post.
- Strike the Snap Punch with a hammer until the top of the post rolls over to securely hold the Button and Socket together.

Attaching a Snap Stud to metal

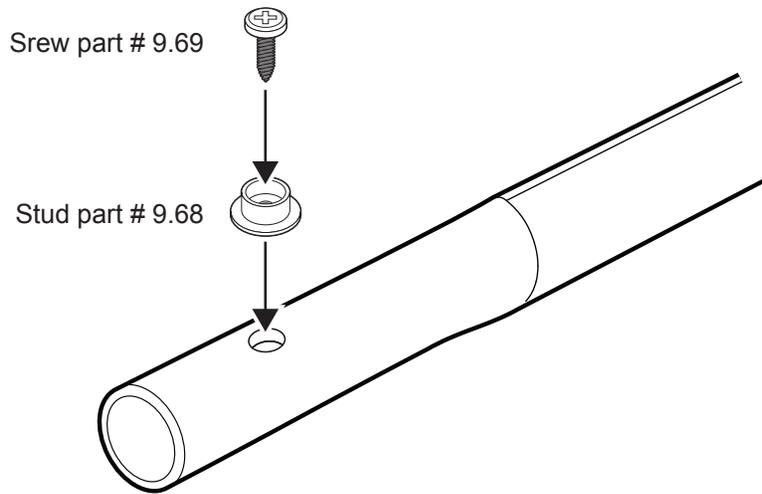

- Use a Phillips #2 screwdriver to attach the Stud #9.68 to a metal part with an existing hole.
- If it is necessary to drill a hole for the screw, use a 3/32" drill.

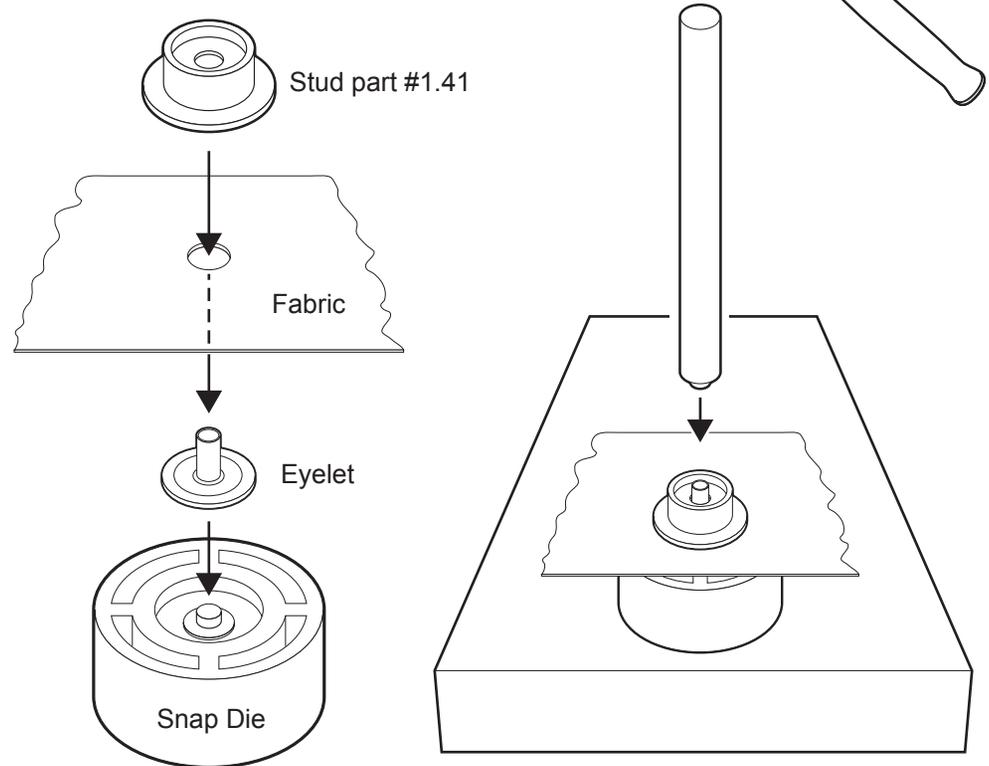

- Punch a hole in the fabric.
- Place the Snap Die on a firm surface.
- Place the Eyelet in the nipple side of the Snap Die.
- Place the fabric hole over the post on the Eyelet.
- Place a Stud over the Eyelet post.
- Place the nipple end of the Snap Punch on top of the Eyelet post.
- Strike the Snap Punch with a hammer until the top of the post rolls over to securely hold the Eyelet and Stud together.