



Installation Instructions Supertop NX 2-Door

Vehicle Application:
Jeep® JK Wrangler 2007-2018
Part Number 54722

Installation Tips

Before you begin installing your new Supertop NX, please read all the instructions thoroughly.

For easier installation, the top should be installed at a temperature above 72°F. Below this temperature, the fabric may contract an inch or more, making it difficult to fit the vehicle.

It is normal for the fabric to contract and wrinkle when stored in the shipping carton. Within a few days after installation, the fabric will relax and the wrinkles will disappear.



WARNING

Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. Never operate the vehicle in excess of manufacturer's specifications.

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

WEAR SEAT BELTS AT ALL TIMES




CAUTION

Safety glasses should be worn at all times when installing this product.



Tools




Drill Driver &
#2 Phillips Bit




#2 Phillips
Screwdriver



T30 and T40
Torx Drivers



Vise-Grips



Adjustable
Wrench



Safety
Glasses

Installation Time



4 hours

Skill Level



3 - Moderately Difficult

Support

We're here to help! Go to:
<https://www.bestop.com>
and click on **Need Help?**



<https://www.bestop.com/video-library>



Installation Instructions Supertop NX 2-Door

Vehicle Application:
Jeep® JK Wrangler 2007-2018
Part Number 54722

Sugerencias de Instalación

Antes de empezar a instalar esta unidad, lea atentamente todas las instrucciones.

Para un buen ajuste:

Para facilitar la instalación, el producto debe instalarse a temperaturas superiores a 72 °F (22 °C).

Por debajo de esta temperatura, la tela puede encogerse una pulgada o más, lo que dificultaría su ajuste al vehículo.

Es normal que la tela se contraiga o arrugue cuando está guardada en la caja de empaque. A los pocos días después de la instalación, la tela se relajará y las arrugas desaparecerán.



ADVERTENCIA

Este producto se diseñó principalmente para mejorar la apariencia del vehículo y proteger a los ocupantes de las condiciones climáticas comunes. De ninguna manera piense que los componentes de este producto pueden servir como medio de contención para los ocupantes del vehículo o que pueden protegerlos contra lesiones o la muerte en caso de accidente. Este producto no protegerá a los ocupantes contra caídas de objetos. Nunca conduzca este vehículo fuera de las especificaciones del fabricante.

USE LOS CINTURONES DE SEGURIDAD EN TODO MOMENTO

Lea y siga con precisión todas las instrucciones de instalación que se proporcionan para instalar este producto. Si no lo hace, podría producirse un mal ajuste que colocaría a los ocupantes del vehículo en una situación potencialmente peligrosa.



PRECAUCIÓN

Debe usar gafas protectoras en todo momento durante la instalación de este producto.

Conseils pour l'installation

Lire toutes les instructions au complet avant de commencer l'installation de cet assemblage.

Pour un ajustement sans problème :

Afin de faciliter l'installation, ce produit doit être installé à des températures au-dessus de 72 °F (22 °C).

Sous cette température, le tissu peut rétrécir d'un pouce (2,5 cm) ou plus, ce qui rendra l'ajustement sur le véhicule difficile.

Il est normal que le tissu rétrécisse et plisse pendant qu'il est dans la boîte d'expédition. En quelques jours après l'installation, le tissu se détendra et les plis disparaîtront.



AVERTISSEMENT

Ce produit est conçu principalement pour améliorer l'apparence du véhicule et pour protéger les occupants des conditions météorologiques usuelles. Ne jamais se fier aux composants de ce produit pour se protéger de blessures ou de la mort en cas d'accident. Ce produit ne protégera pas les occupants des chutes d'objets. Ne jamais utiliser le véhicule au-delà des caractéristiques techniques indiquées par le fabricant.

PORTER UNE CEINTURE DE SÉCURITÉ EN TOUT TEMPS

Lire et suivre, très fidèlement, toutes les instructions d'installation fournies lors de l'installation de ce produit. Ne pas suivre cette consigne peut causer une installation inadéquate et mettre les occupants du véhicule dans une situation potentiellement dangereuse.



MISE EN GARDE

Des lunettes de sécurité doivent être portées en tout temps lors de l'installation de ce produit.




Installation Instructions Supertop NX 2-Door

Vehicle Application:
Jeep® JK Wrangler 2007-2018
Part Number 54722


Parts List





M5 x 30 Screw
Qty. 2
Part # 308.87

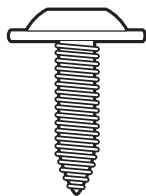

Bow Mount Screw
Qty. 4
Part # 308.64




Pan Head
Washer Screw
Qty. 23
Part # 393.79




Plastic Bushing
Qty. 4
Part # 473.40




M5 Nylock Nut
Qty. 2
Part # 308.62



Self-Drill Screw
Qty. 2
Part # 312.09

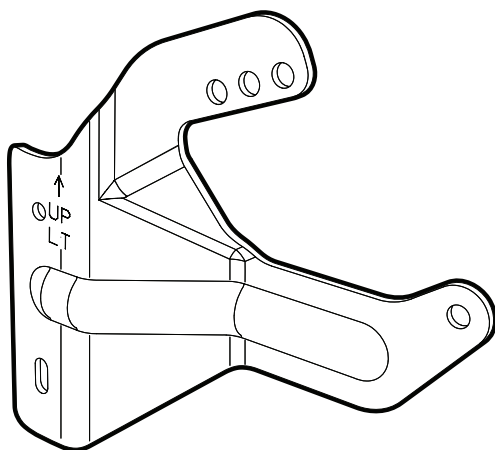

Bow Mount Bracket
Qty. 1
Part # 482.89 - Left

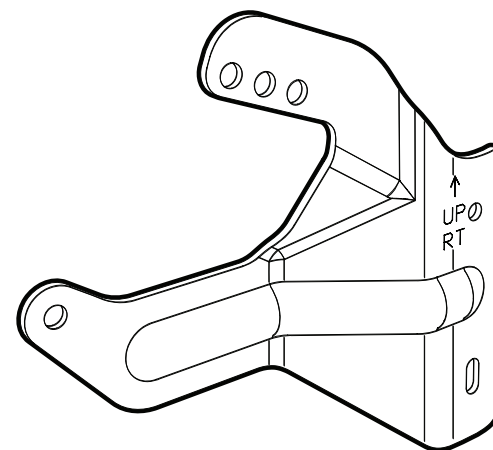



Bow Mount Bracket
Qty. 1
Part # 482.88 - Right




Installation Instructions Supertop NX 2-Door

Vehicle Application:
Jeep® JK Wrangler 2007-2018
Part Number 54722


Parts List

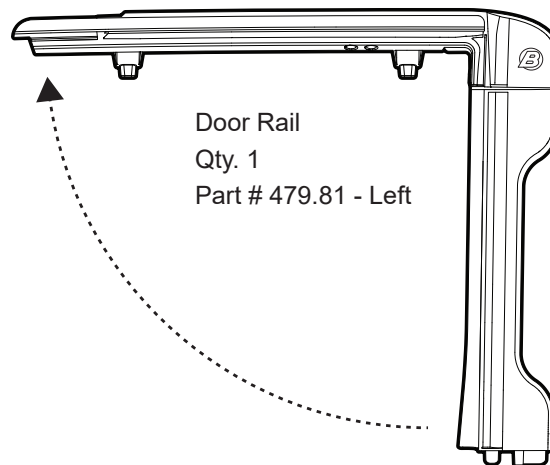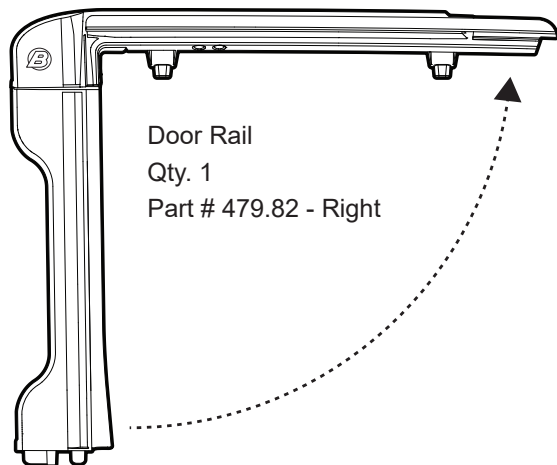

M8 x 80mm Screw
Qty. 4
Part # 532.23

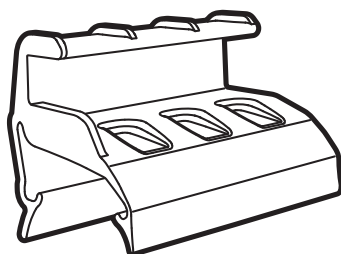

Tailgate Bar Mount
Qty. 1
Part # 488.47 - Left

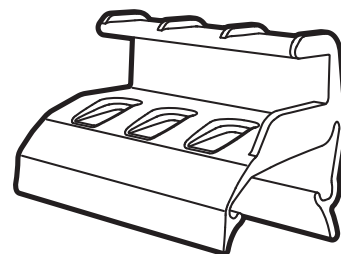


Tailgate Bar Mount
Qty. 1
Part # 488.46 - Right




Installation Instructions Supertop NX 2-Door

Vehicle Application:
Jeep® JK Wrangler 2007-2018
Part Number 54722


Parts List

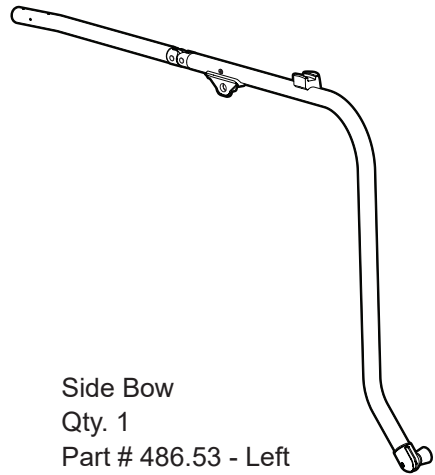


Side Bow
Qty. 1
Part # 486.53 - Left

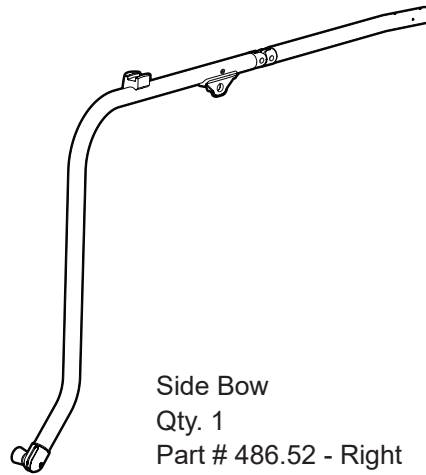


Side Bow
Qty. 1
Part # 486.52 - Right

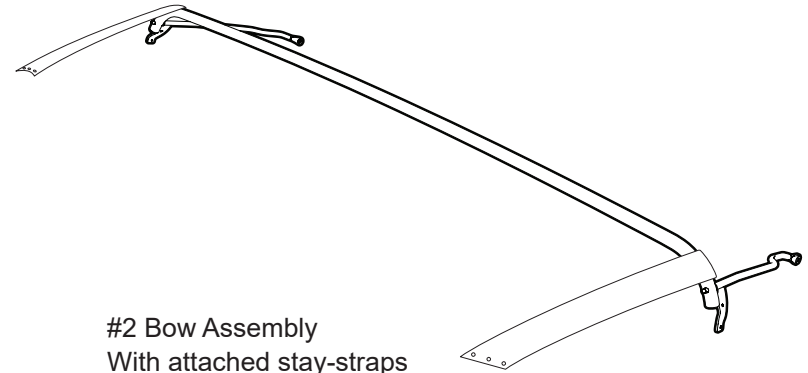


#2 Bow Assembly
With attached stay-straps
Qty. 1
Part # 459.30

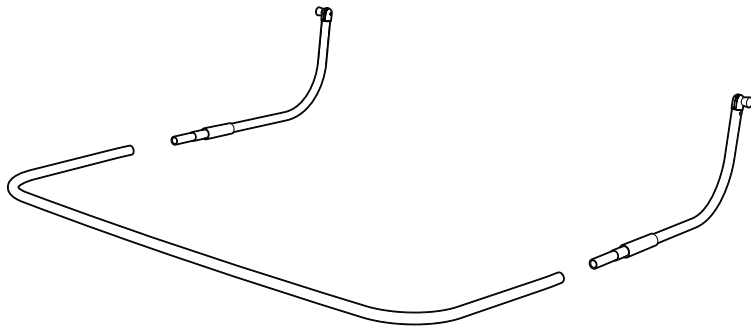

Rear Bow Assembly
Qty. 1 (3 pieces)
Part # 486.54



Foam Tape Strips
Qty. 2
Part # 417.43

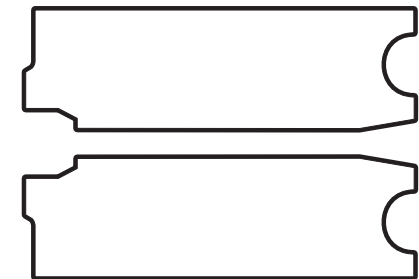

Foam Seals
Qty. 1 per side
Part # 457.76 (R) & 457.77(L)




Installation Instructions Supertop NX 2-Door

Vehicle Application:
Jeep® JK Wrangler 2007-2018
Part Number 54722


Parts List




Front Arch Bow
Qty 1
Part # 486.55

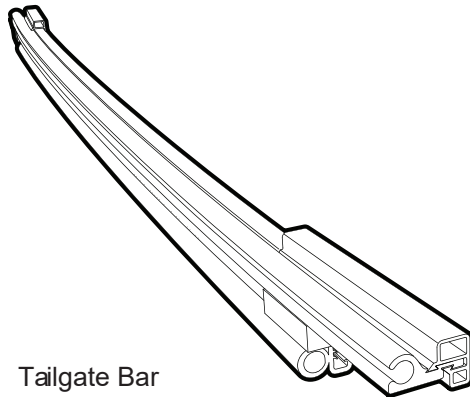



Tailgate Bar
Qty. 1
Part #489.46

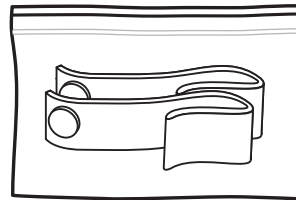


Strap Kit
Qty. 1
Part #386.90

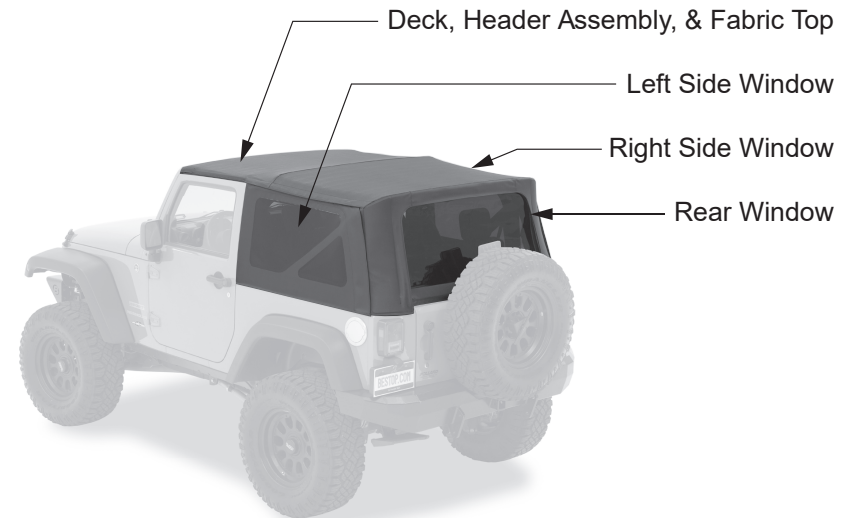


Parts

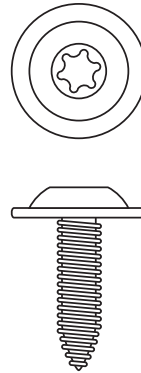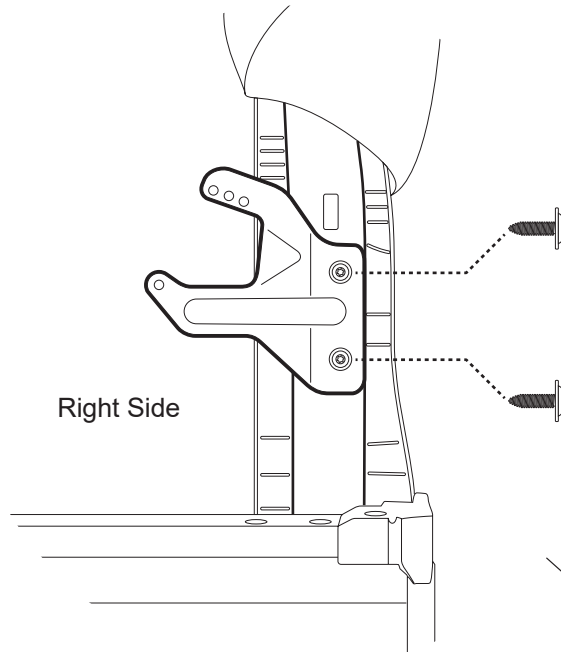

Bow Mount Screw
Qty. 2 per side
Part # 308.64

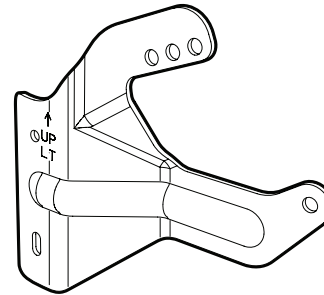

Bow Mount Bracket
Qty. 1
Part # 482.89 - Left

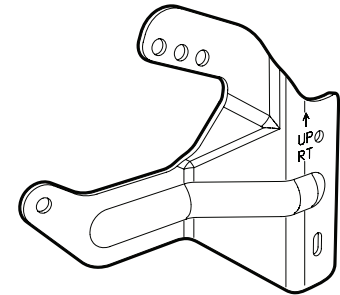

Bow Mount Bracket
Qty. 1
Part # 482.88 - Right

Unzip the protective covers on the front sport bar down-tubes and locate the two threaded holes on the side of each sport bar down-tube.

Screw the Right Bow-Mount Bracket #482.88 to the right-side sport bar down-tube using (2) Bow-Mount Screws #308.64.

Screw the Left Bow-Mount Bracket #482.89 to the left-side sport bar down-tube using (2) Bow-Mount Screws #308.64.





Replace the sport bar protective cover, making sure that the Bow Mount Brackets stick out through the openings in the cover.

Parts


Door Rail
Qty. 1 per side
Part # 479.82 - Right (shown)
479.81 Left

M8 x 80mm Screw
Part #532.23
Qty. 4

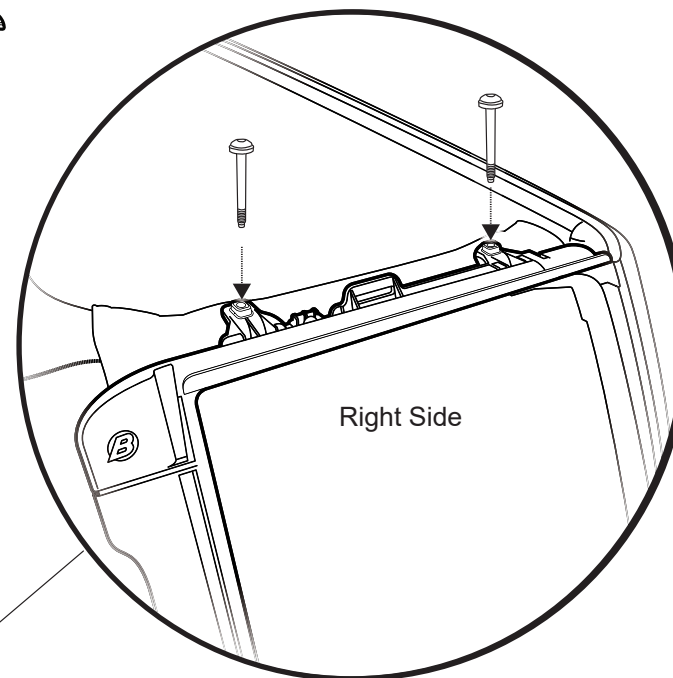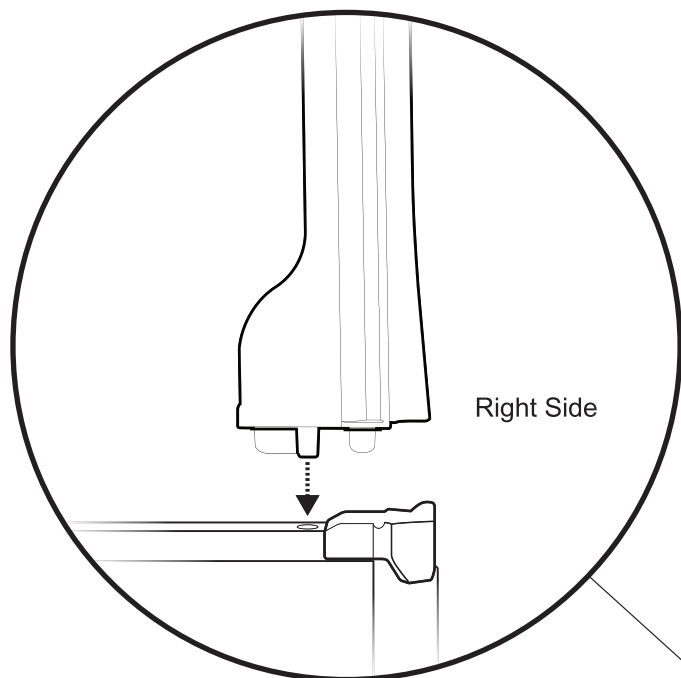

Locate the Right Door Rail #479.82. Attach the Right Door Rail assembly to the Jeep belt rail behind the right side door, inserting the alignment pin on the bottom of the Door Rail assembly into the hole in the top of the belt rail.



Repeat for left side using the Left Door Rail #479.81.

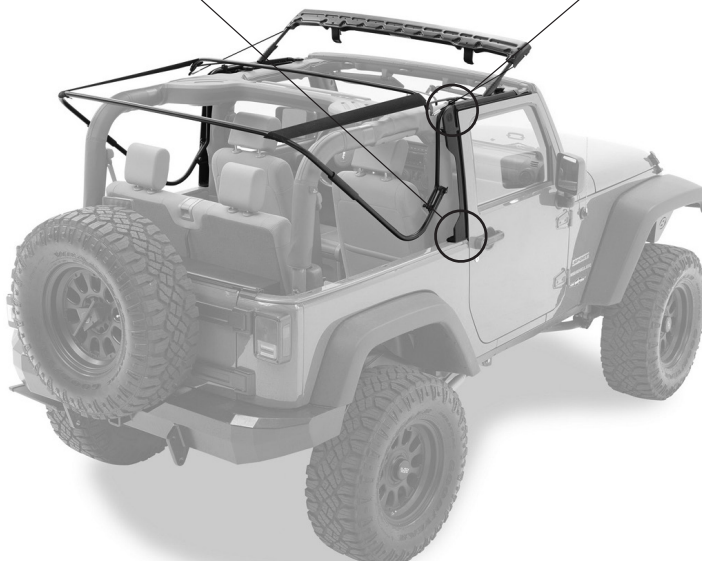

Secure Left and Right Rear Door Rails to the Jeep Sport Bar using (2) M8x80mm Screws per side. The screws go through the tabs on each Door Rail, and screw into the threaded holes. Torque to 55lb/in (4.5lb/ft)

Parts

Top Arch
Qty. 1
Part #486.55

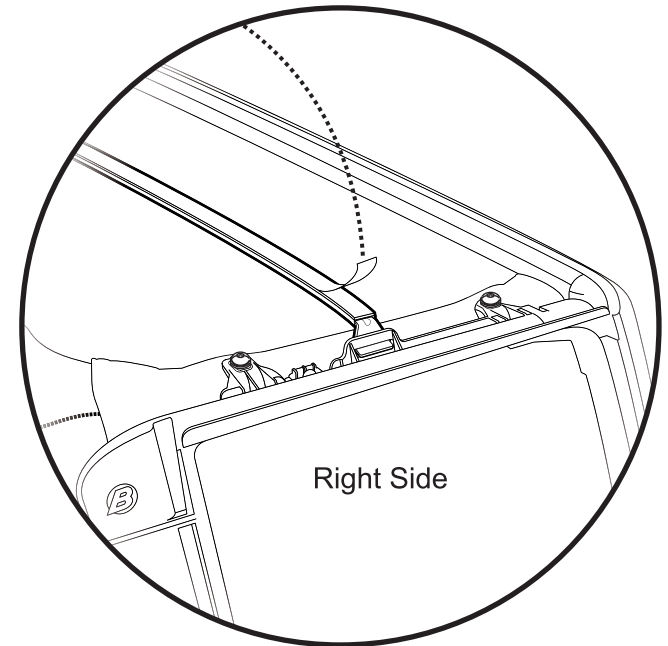
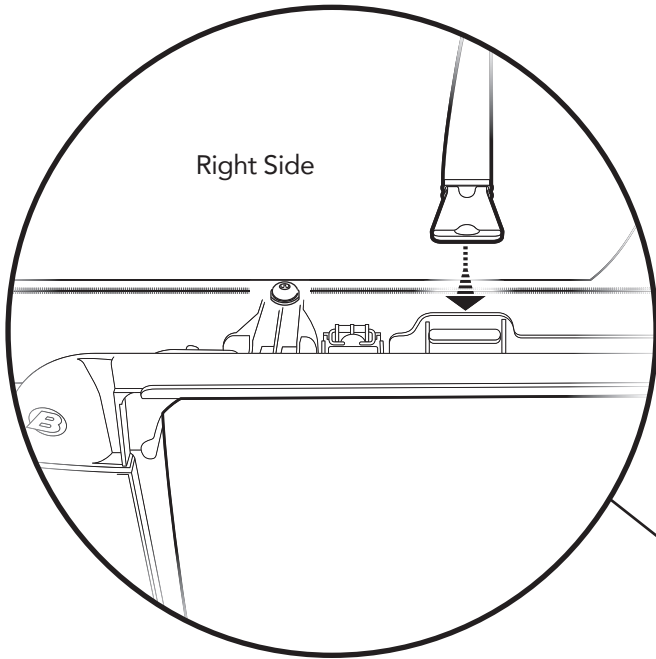


Insert the Top Arch into the slotted tab on the Door Rail. Insert one end of the arch and flex the arch to insert the other end into the tabbed slot on the opposite side of the Jeep.


Remove and discard the protective peel-off strip on the top surface of the Top Arch.



Parts

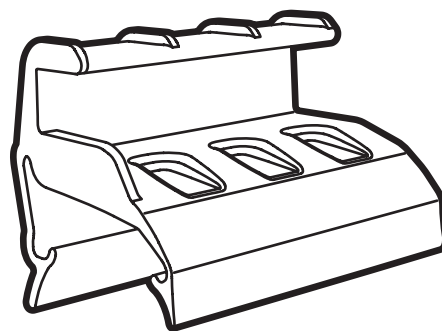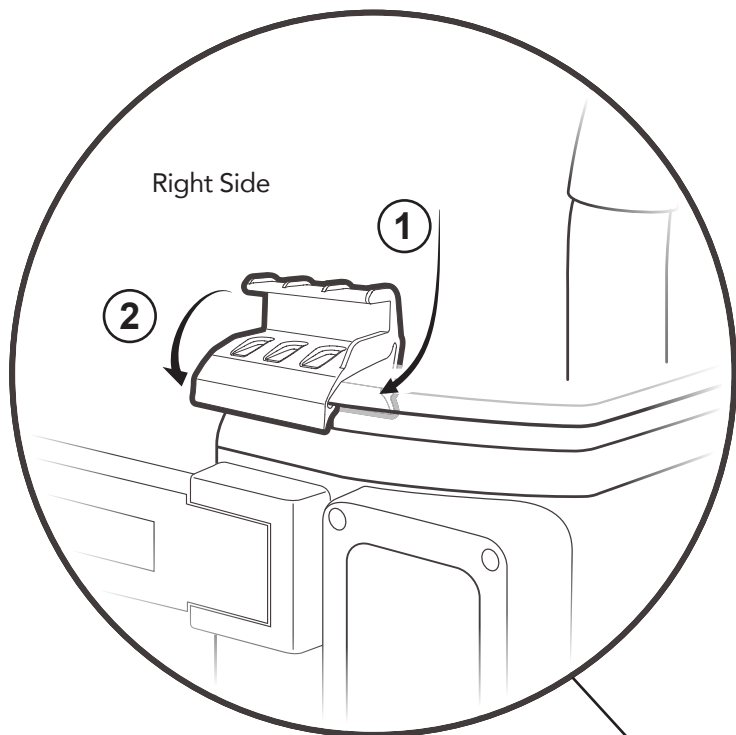

Clip Tailgate Assy - Left
Qty. 1
Part # 488.47

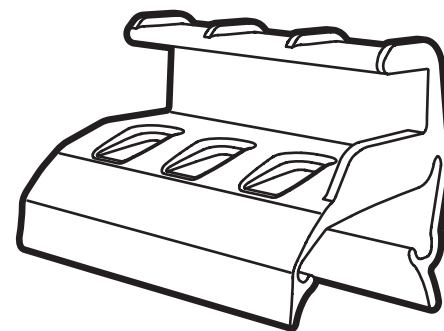


Clip Tailgate Assy - Right
Qty. 1
Part # 488.46


Locate the left and right Tailgate Bar Mounts. Each mount snaps onto the Jeep belt rail just outboard of the tailgate opening.

Snap each mount into place by hooking the inner catch portion of the mount under the belt rail on the inside, and then rolling the mount downward until it snaps into place under the bottom edge of the outside belt rail.




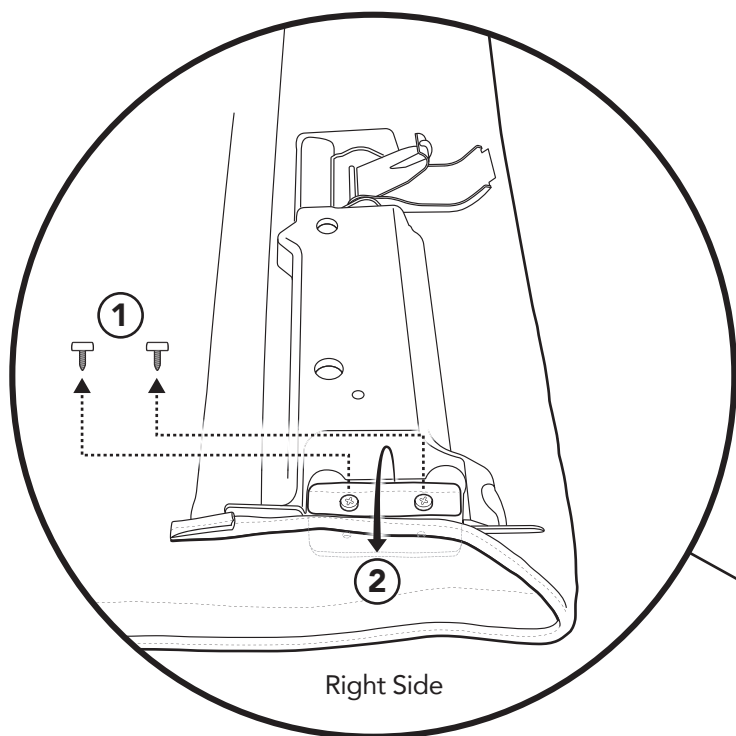

Parts

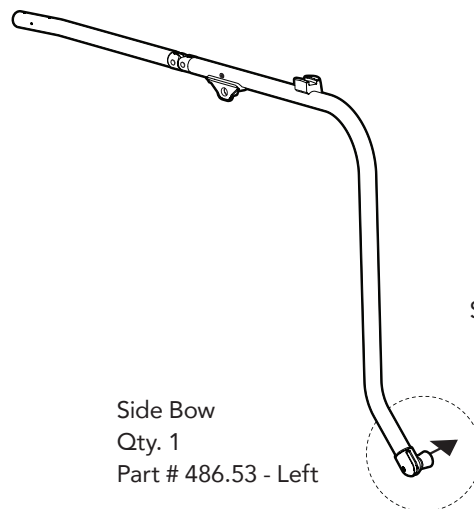

Spring Catches
Face In


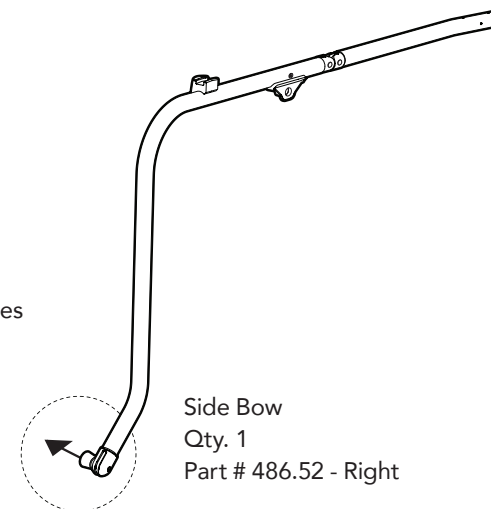


Lay the Header/Fabric Assembly out with inside of fabric facing up. You may want to use the shipping box to keep the fabric off the ground.

Remove and set aside the two screws holding the protective flap down on the inside of the header. Fold the protective flap back to expose the screw holes used for attaching the Right Side Bow.

Repeat on left side of Header/Fabric Assembly.



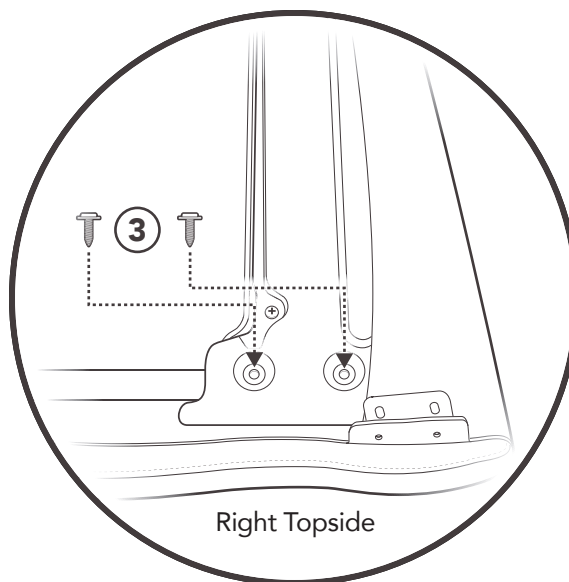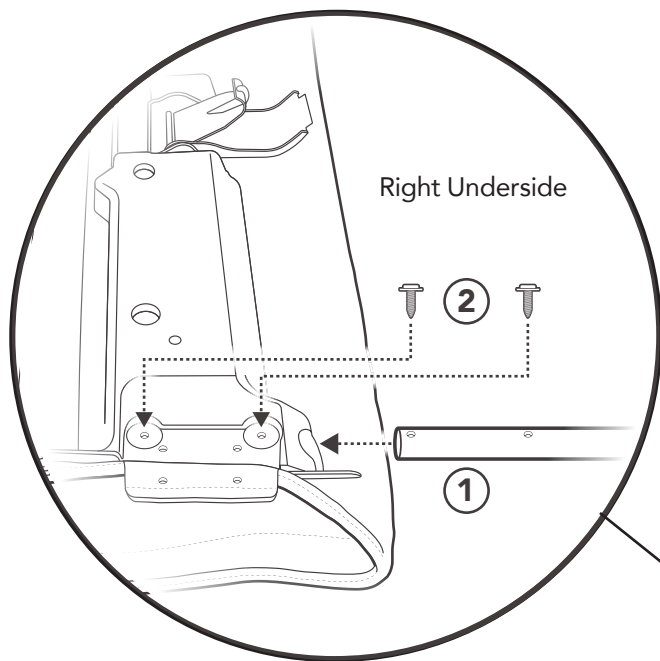


Secure the Right Side Bow in place with four (4) #8 x 1/2" Pan Head Washer Screws #393.79: two from the underside of the Header/Fabric assembly, and two from the topside.


Repeat on left side, using Left Side Bow.

Insert the end of the Right Side Bow #486.52 into the hole in the right side of the Header/Fabric Assembly, aligning the two holes in the tubing with the two holes in the header. Make sure that the Spring Catch faces in.


Parts



Pan Head
Washer Screw
Qty. 4 per side
Part # 393.79

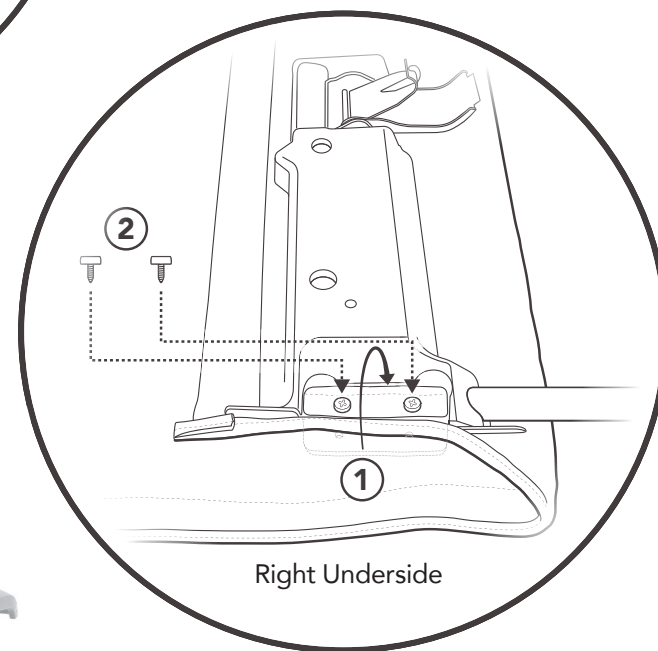


Replace the protective flaps on both sides, and re-insert the screws you set aside, two for each side.

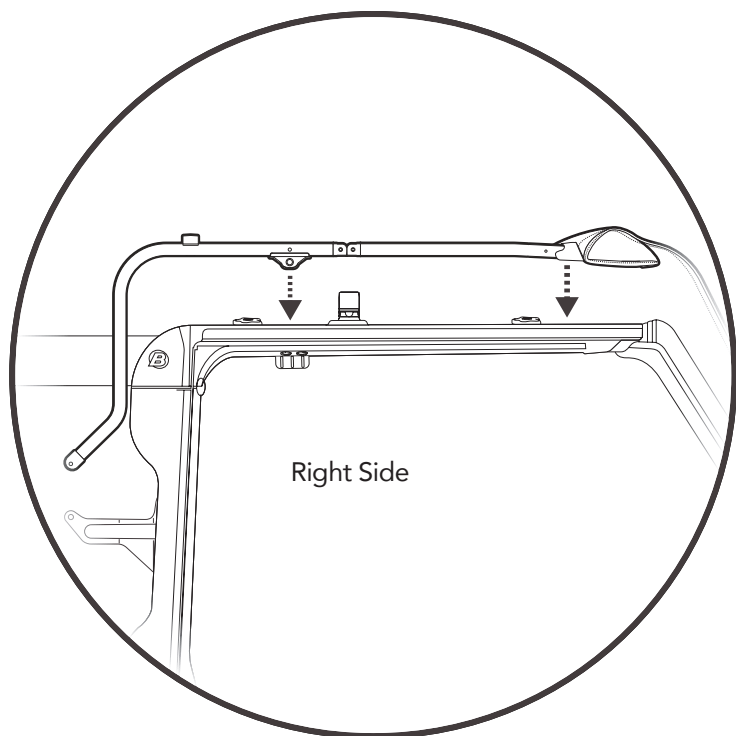

Lift Fabric/Header/Side Bow Assembly onto top of Jeep, with the Header sitting on top of the Jeep windshield, and the fabric draped forward over the Jeep hood.

You may want to protect the finish of the Jeep by putting a blanket across the Jeep hood.

Extend the Side Bows out straight and lay the Side Bows on top of the Door Rails.

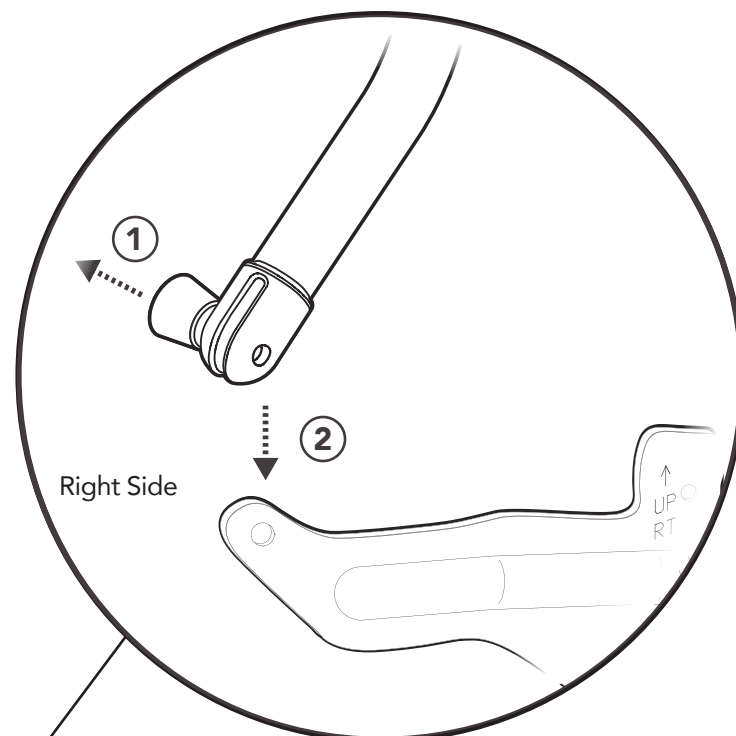

Release the spring-loaded catch at the end of the bow leg by pulling out on the knob.


Slide the slotted end of the catch over the leg of the Bow Mount Bracket, and release the catch so that it snaps into place in the hole.

Repeat on the left side.



Parts

#2 Bow Assembly
With attached stay-straps
Qty. 1
Part # 459.30





Plastic Bushing
Qty. 2 per side
Part # 473.40



M5 Nylock Nut
Qty. 1 per side
Part # 308.62



M5 x 30 Screw
Qty. 1 per side
Part # 308.87

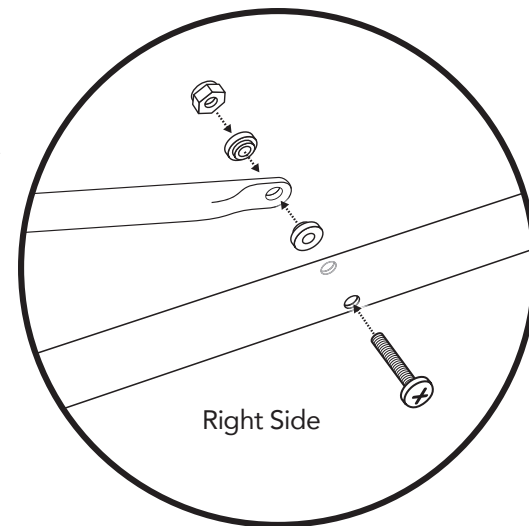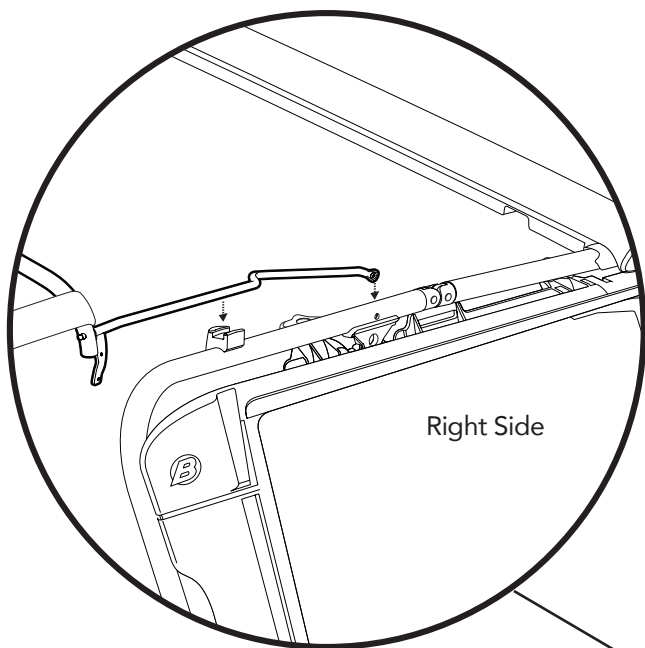



Locate the #2 Bow Assembly #459.30 with attached stay straps. Place the #2 Bow Assembly on top of the side bows, with the legs of the #2 Bow resting on the plastic spacers on top of each side bow tubing. Align the holes in the end of each #2 Bow leg with the holes in the side bows.

Secure the #2 Bow Assembly to the side bow using one (1) M5x30 screw #308.87, two (2) plastic bushings #473.40, and one (1) M5 Nylon Lock Nut #308.62 per side, in the order shown in the diagram above.

Repeat on the left side.



Detail

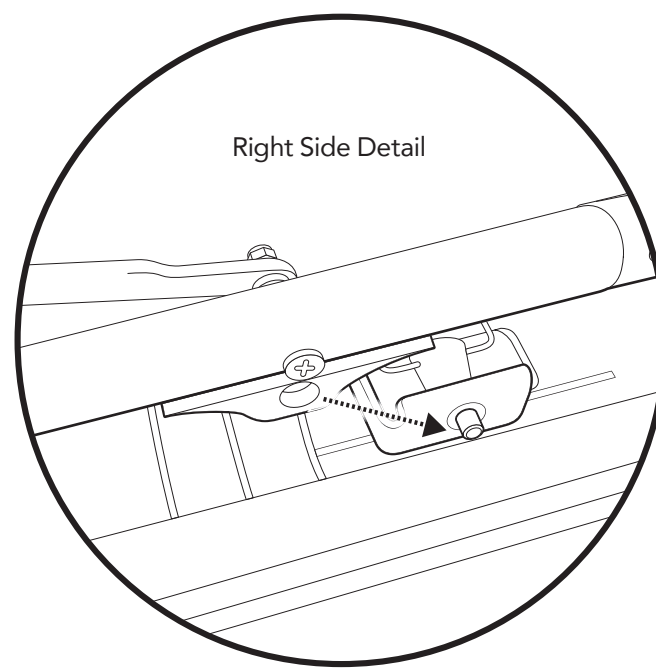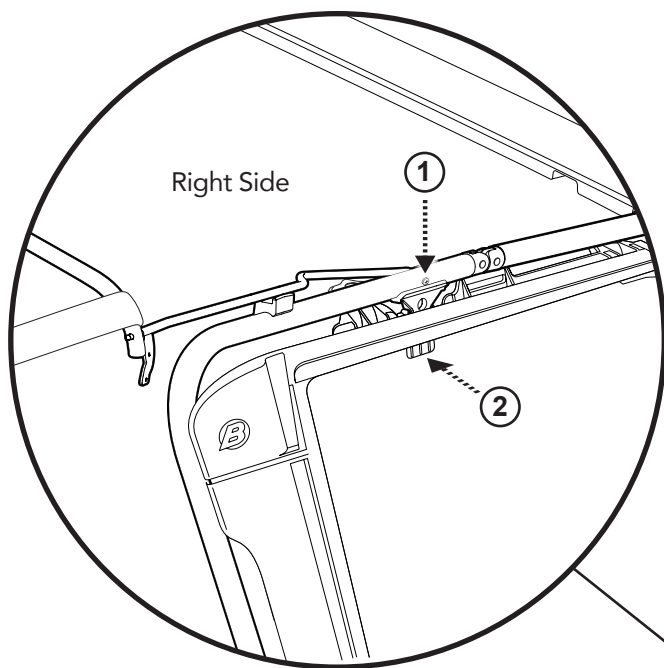

Align the Header/Fabric/Bow Assembly so that the locking flange with brass bushing is positioned above the spring-loaded locking lever assembly in the top of the door rail.


While pushing in the latch release lever on the underside of the door rail, slide the Header/Fabric/Bow Assembly down so that the locking flange aligns with the spring-loaded locking pin.

Release the latch lever so that the locking pin engages the brass bushing.

Repeat on the left side.



Parts

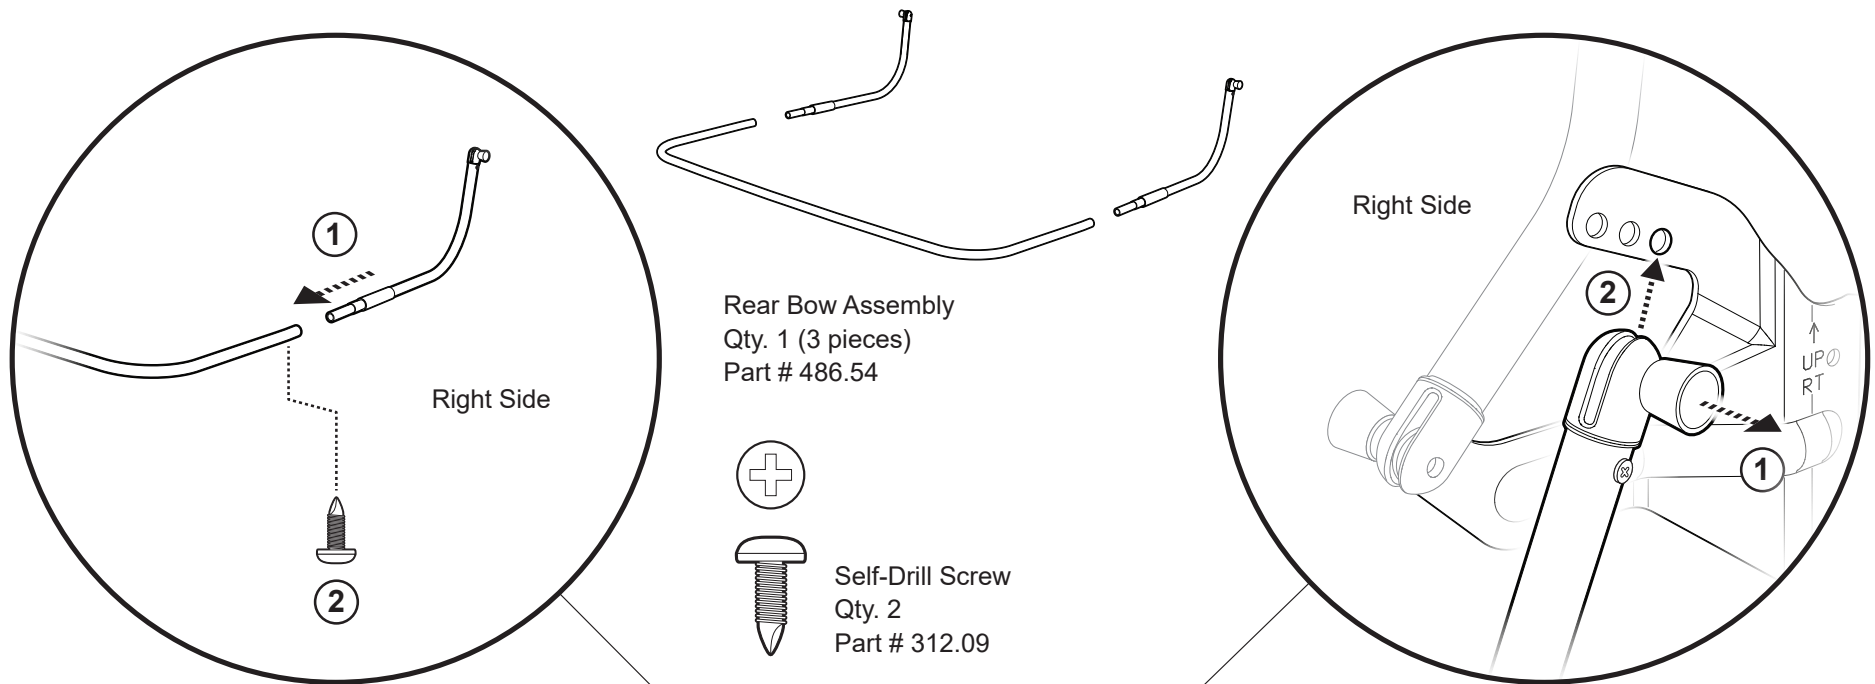

Assemble the Rear Bow as shown in the diagram above. Make sure that the spring catches face outward.

Fasten each leg of the Rear Bow to the hoop using (1) #8x1/2" self-drill screw per side.

Attach the Rear Bow to the Bow Mount Bracket by pulling out on the spring catch release knob, and sliding the catch over the upper leg of the bow mount bracket.

Be sure to attach the spring catch to the hole in the bracket as shown in the diagram above.


Repeat for the left side.





Parts



#8 x 1/2"
Pan Head
Washer Screw
Qty. 3 per side
Part # 393.79



Stay Strap
#456.32
Qty. 1 per side
Attached to #2 Bow

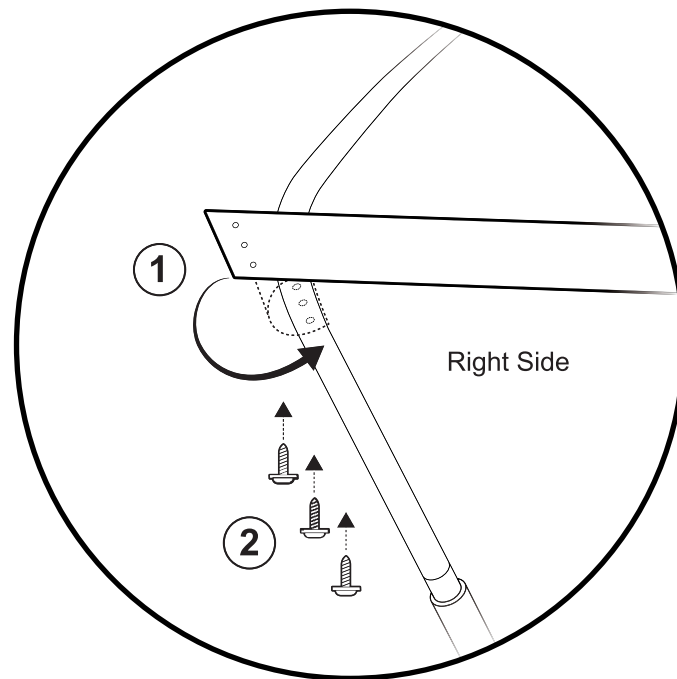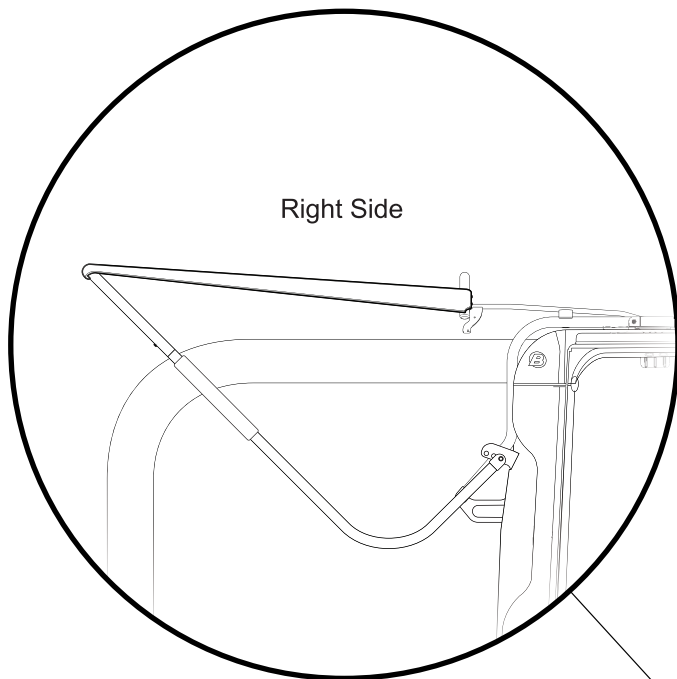


Position Stay Strap as shown in the diagram above. Attach the Stay Strap #456.32 to the top of the right side of the Rear Bow, using (3) #8x1/2" Pan Head Washer Screws #393.79 in the pre-drilled holes in the Rear Bow.


Repeat for left side Stay Strap.




Parts



#8 x 1/2"
Pan Head
Washer Screw
Qty. 5
Part # 393.79

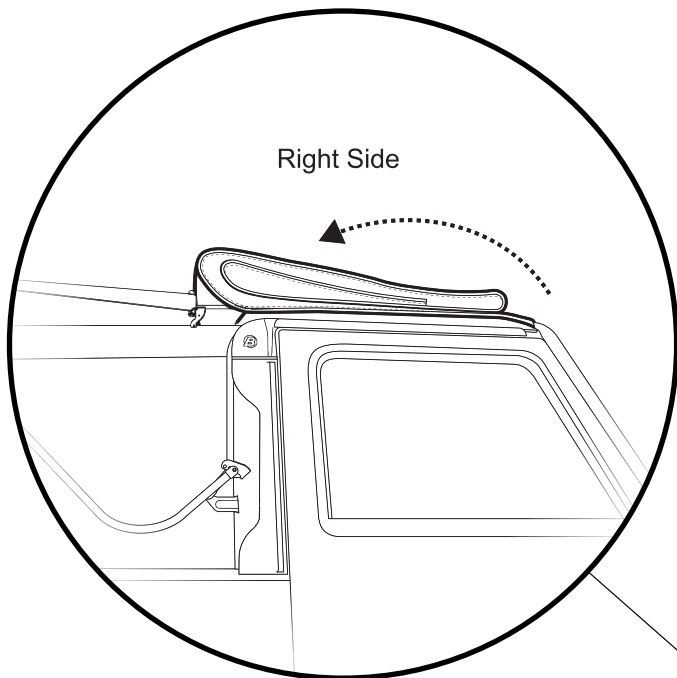


Fold the top fabric partway back across the top of the Jeep, so that the long fabric bowflap sits just in front of the #2 bow.

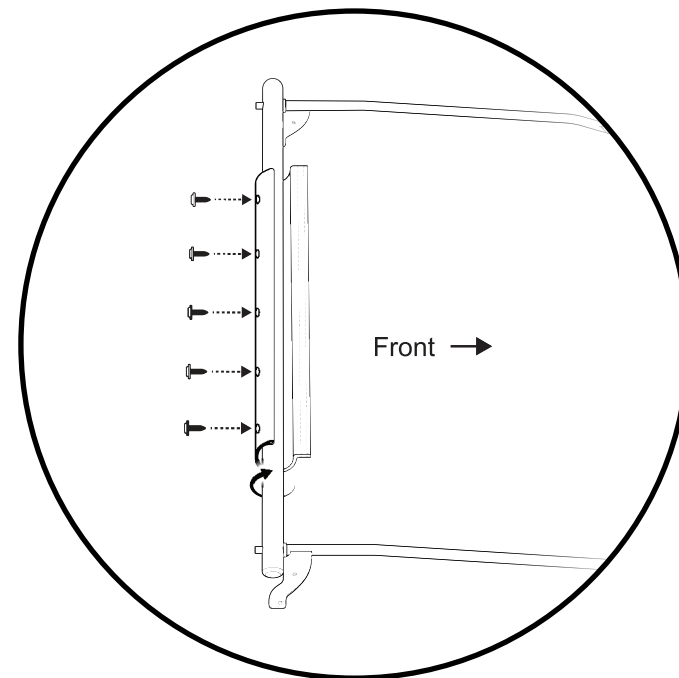


Wrap the flap located just in front of the #2 Bow under the bottom of the #2 Bow, from front to back, and secure it, using (5) #8x 1/2" Pan Head Washer Screws #393.79 in the pre-drilled holes in the rear-facing side of the #2 Bow.


Parts




#8 x 1/2"
Pan Head
Washer Screw
Qty. 4
Part # 393.79

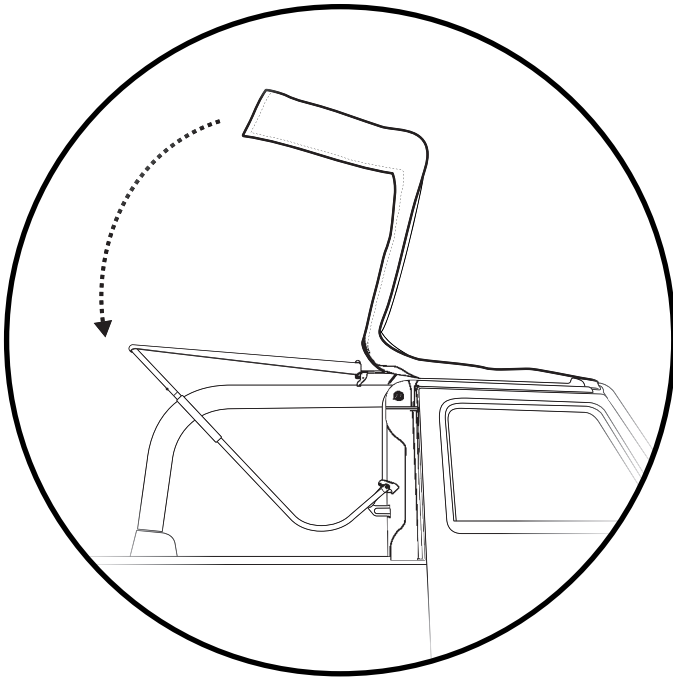


Lift up the fabric and drape it back over the top of the Jeep, pulling it over the top of the Rear Bow and Stay Strap connecting to the #2 Bow.

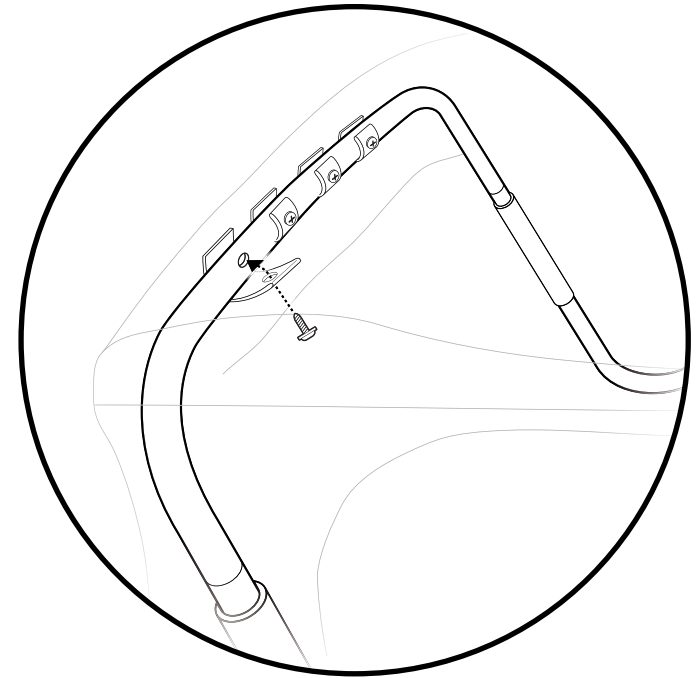

From inside the Jeep, wrap the 4 fabric flaps at the rear of the top around the Rear Bow from underneath, and secure to the Rear Bow, using (4) #8x 1/2" Pan Head Washer Screws #393.79.



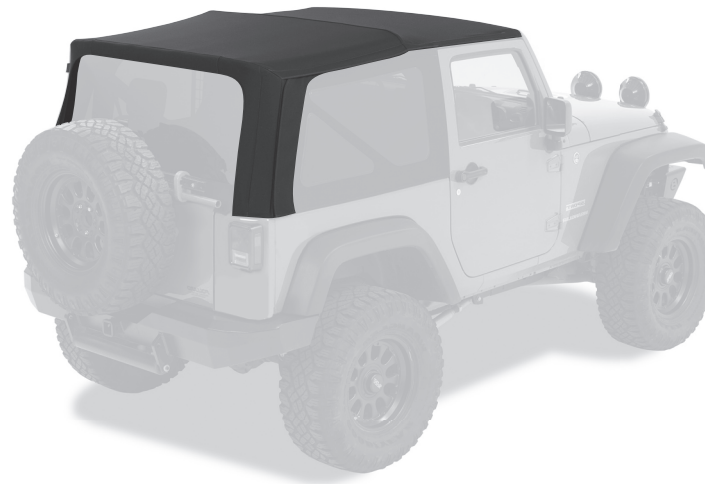


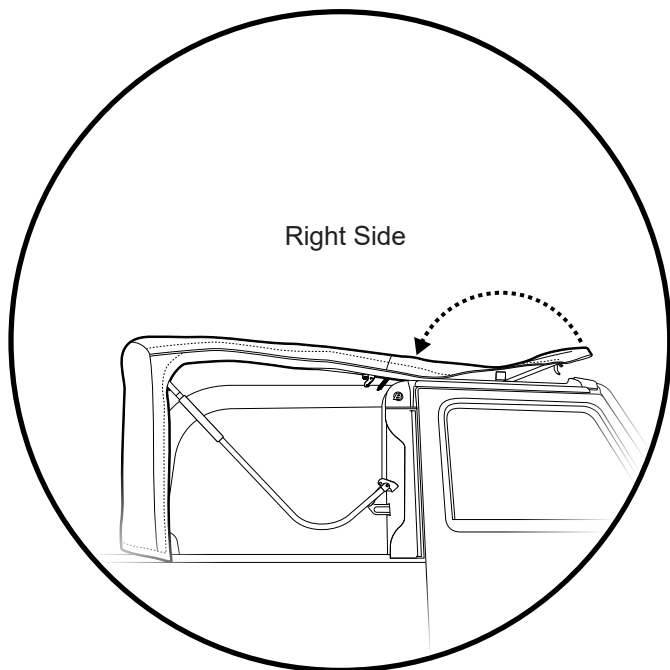

Lift up the Header/Fabric assembly and fold it back over the top of the Jeep, letting it rest on the top just above the #2 Bow.

Attach the free end of the Cable Spring to the bottom hole in the #2 Bow corner bracket, just behind the Door Rail.


Repeat on left side.

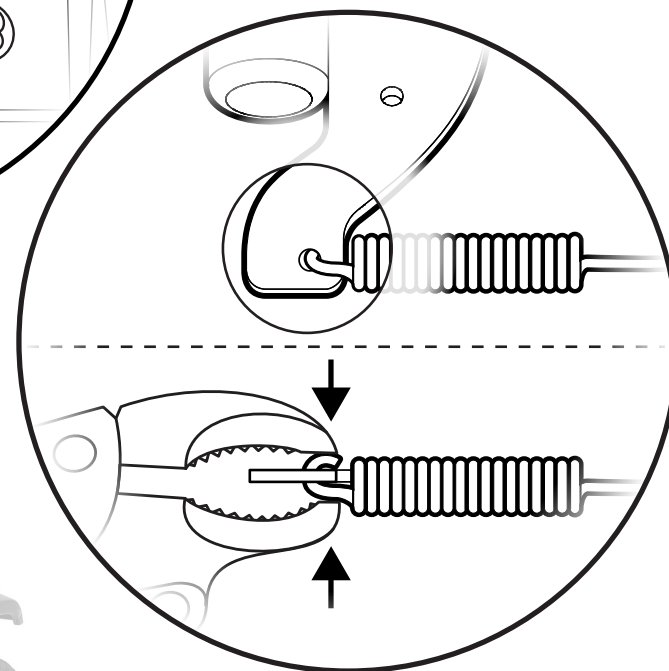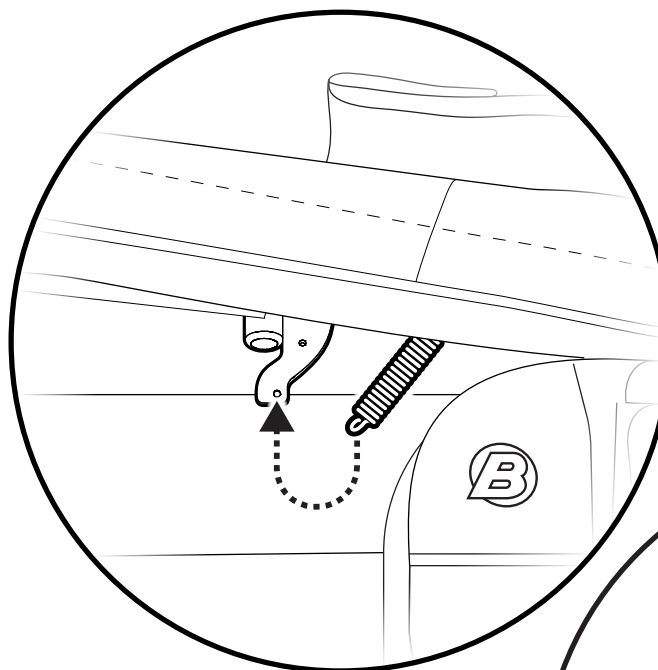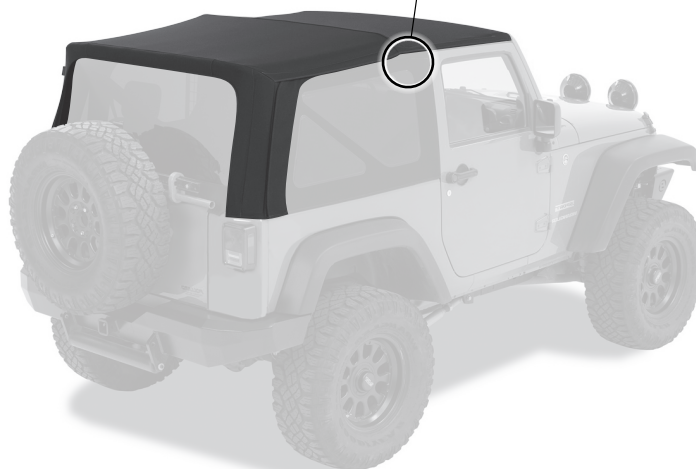

Crimp the end of the spring where it passes through the hole in the corner bracket, to prevent it from coming loose.

Repeat on left side.


Parts

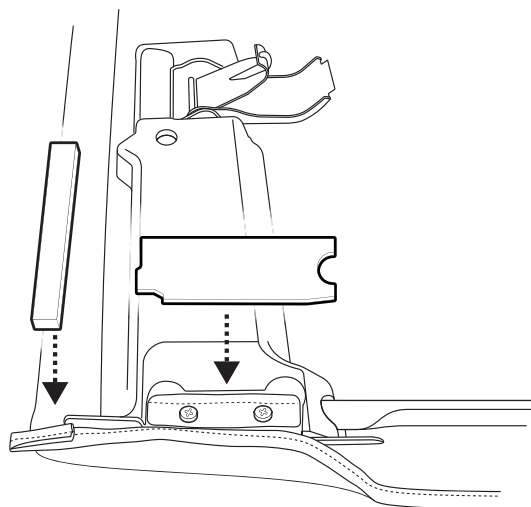


Right Side



Foam Tape Strips
Qty. 2
Part # 417.43

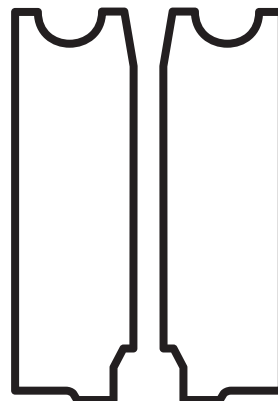

Foam Seals
Qty. 1 per side
Parts # 457.77(L)
& #457.76(R)

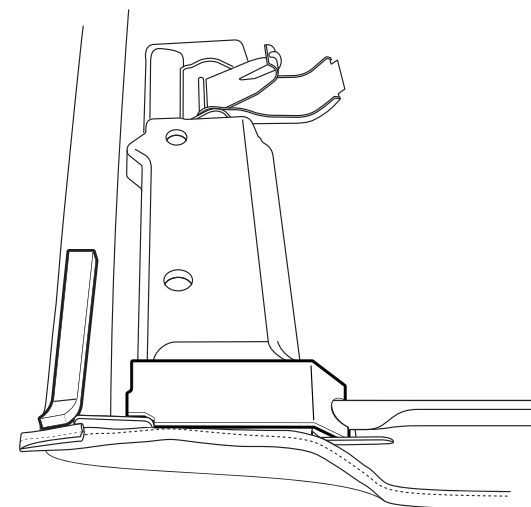



Right Side

With the front portion of the top folded back, locate the (2) Foam Seals and the (2) Foam Tape strips. Remove protective liner from the back side of the Foam Seal and place the Foam Seal in the location shown in the diagram.


Remove protective liner from the back side of the Foam Tape Strip and place the Foam Tape Strip in the location shown in the diagram.

Repeat for the left side.

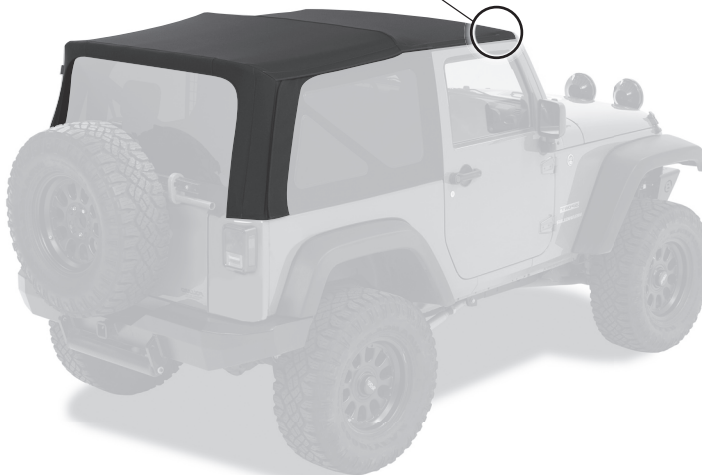

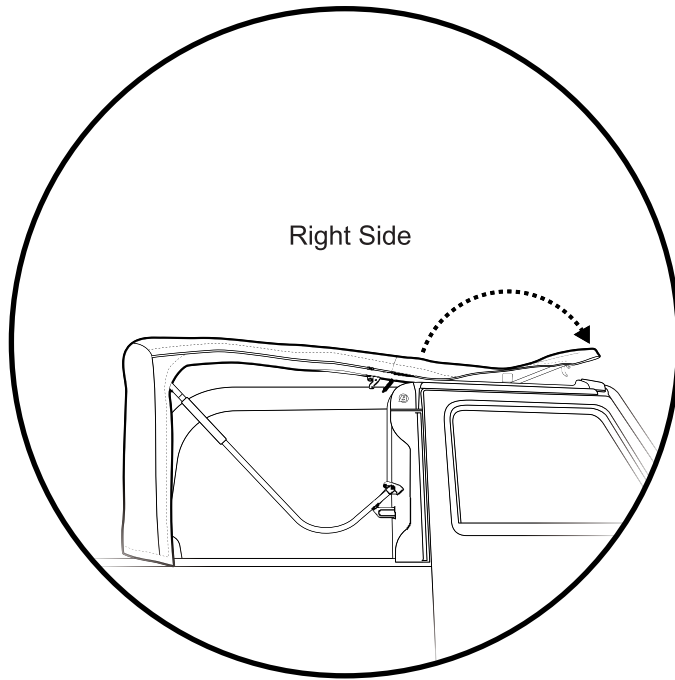




Fold the front portion of the top back toward the closed position, letting it stop in a partially open position.

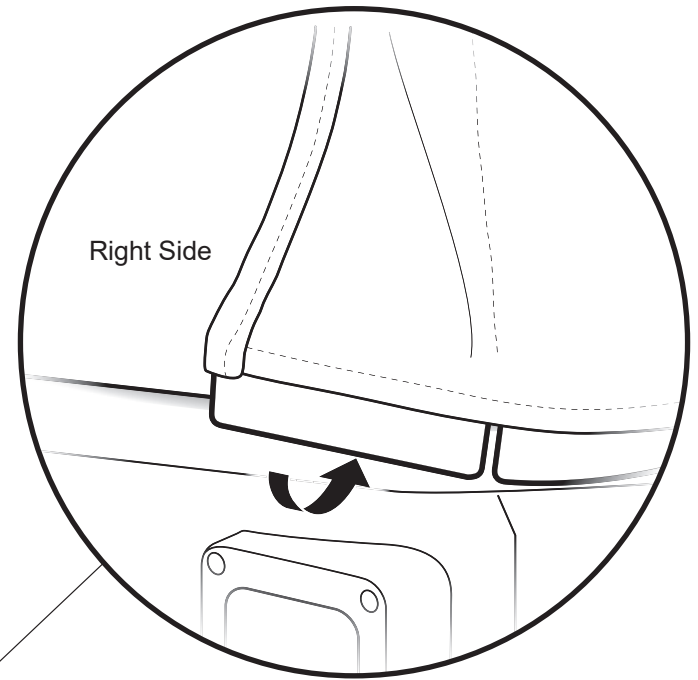


Tuck the plastic tabs at the bottom right corner of the top under the Jeep belt rail by rolling them up underneath the belt rail.

Repeat for the left side.

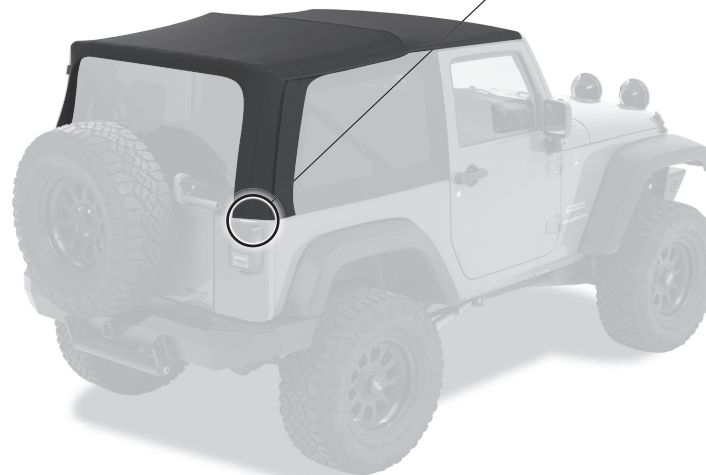


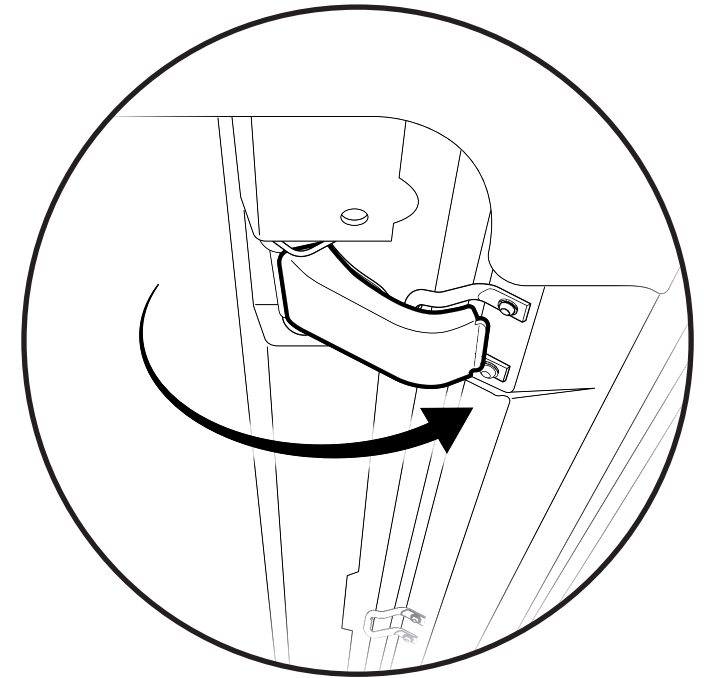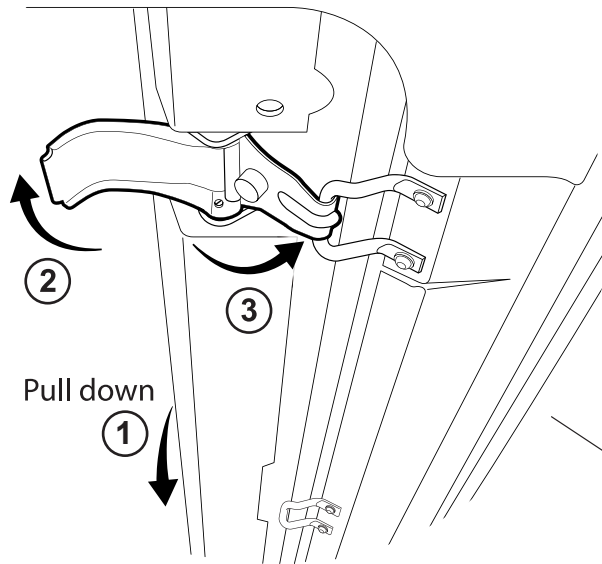

From inside the Jeep, locate the two Windshield Header Latches. To close the latch, pull down on the center of the header and pivot the latch handle to the completely open position to allow the hook to engage the windshield loop. Now pivot the hook forward to engage the windshield loop.


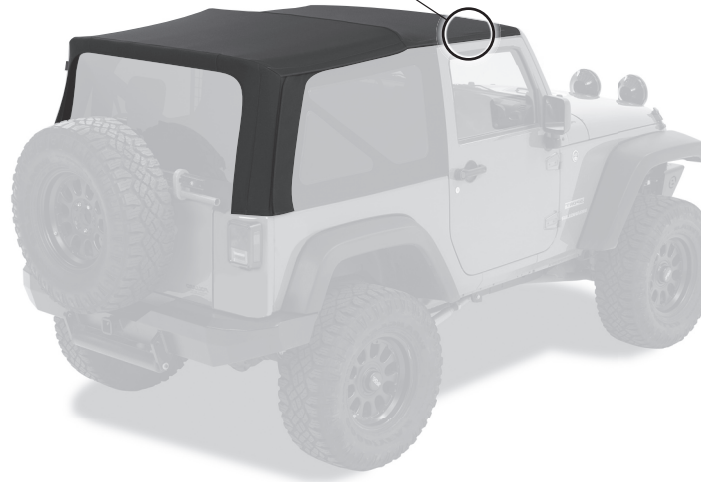


When the hook is engaged with the windshield loop, close the latch by pivoting it forward toward the windshield.

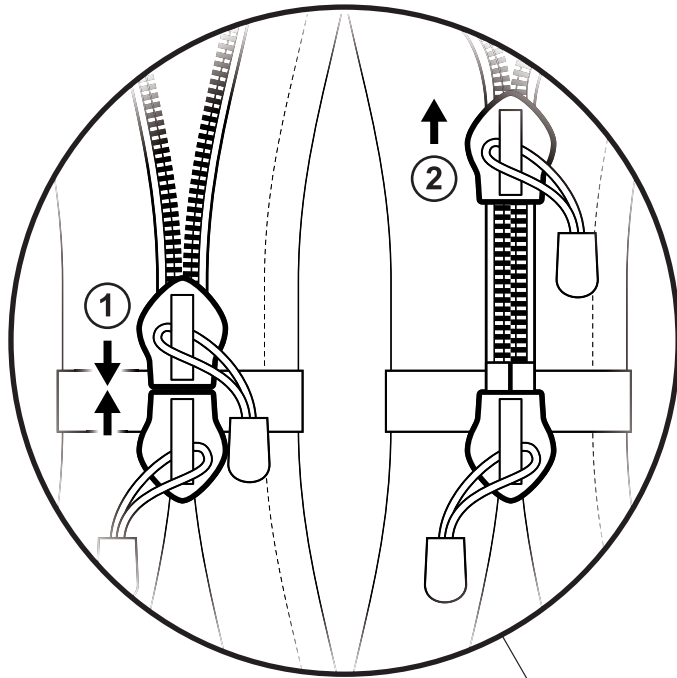


Locate the Rear Window, and orient it so that the zipper pull is at the bottom left corner.


Make sure that the two zipper pulls are next to each other at the bottom left corner of the Rear Window.

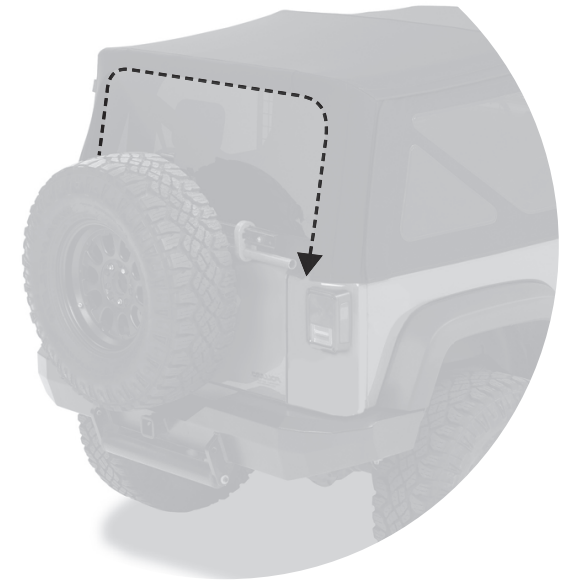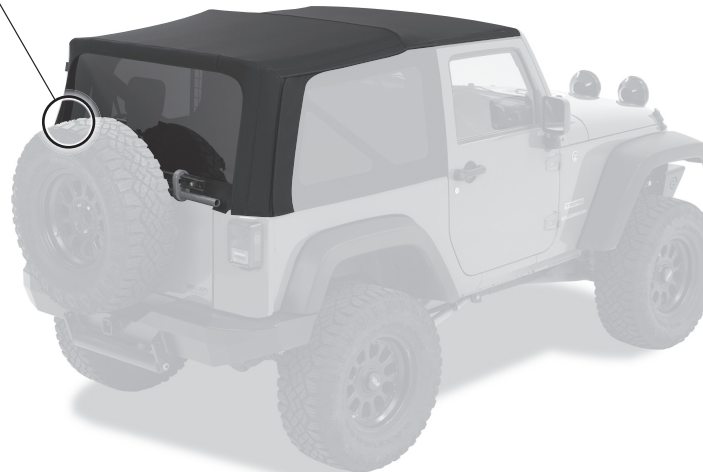

Zip the Rear Window into place by pulling the top zipper pull around the frame of the window, from the bottom left corner over to the bottom right corner.

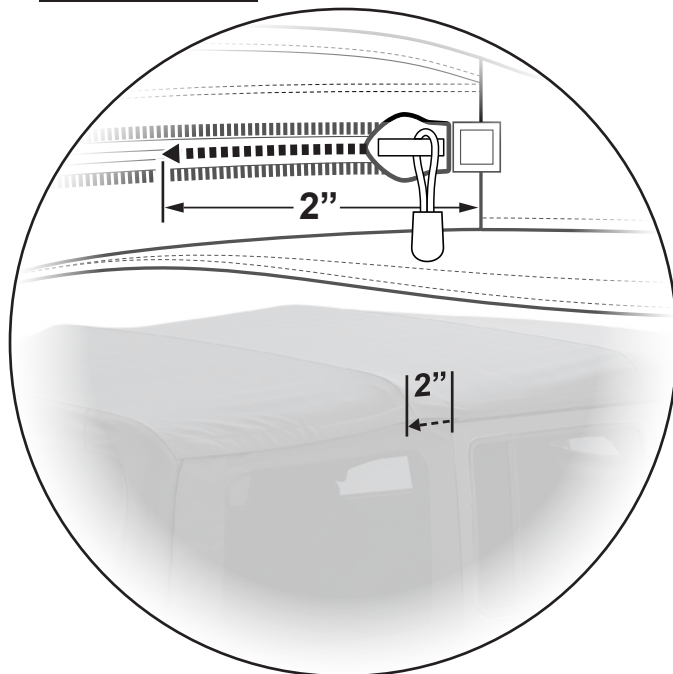


Locate the Right Side Window, and orient it so that the zipper pull is at the top right corner. Zip the window only 2" closed for now.

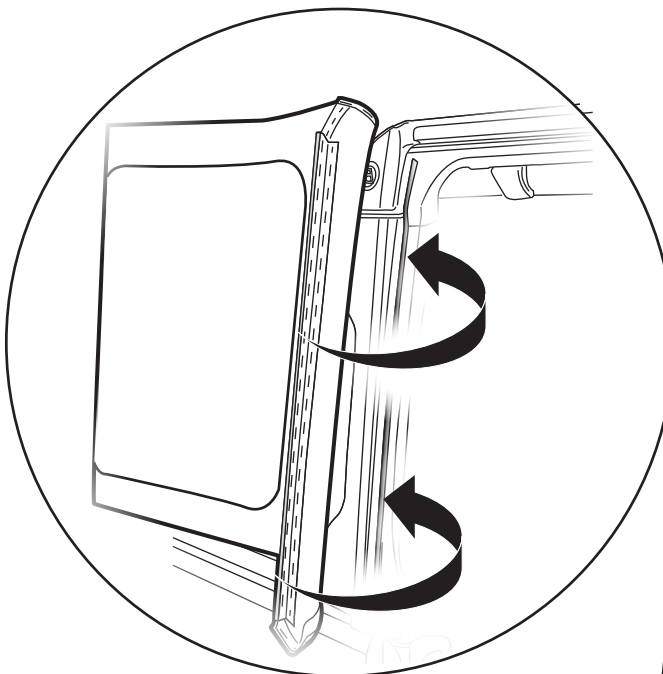



Tuck the plastic angle strip along the front edge of the Side Window into the vertical channel in the front of the Door Rail. The plastic angle strip and attached fabric must be rolled into place in the channel.

Repeat these steps for left side.

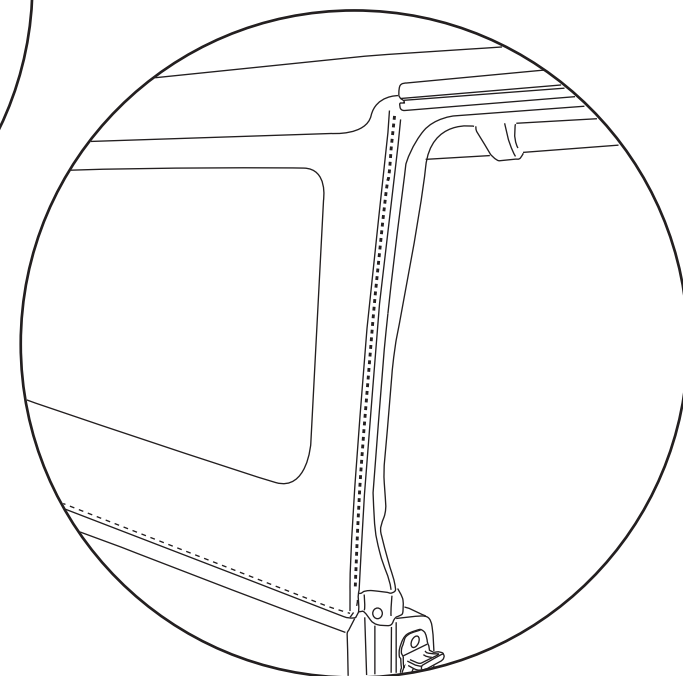


When installed correctly, there will be only one (1) stitch line visible and it will be facing the door opening.

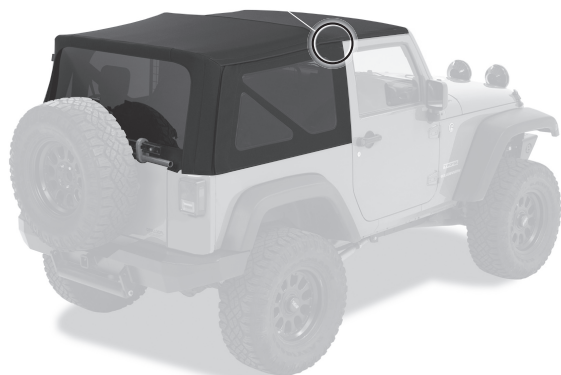

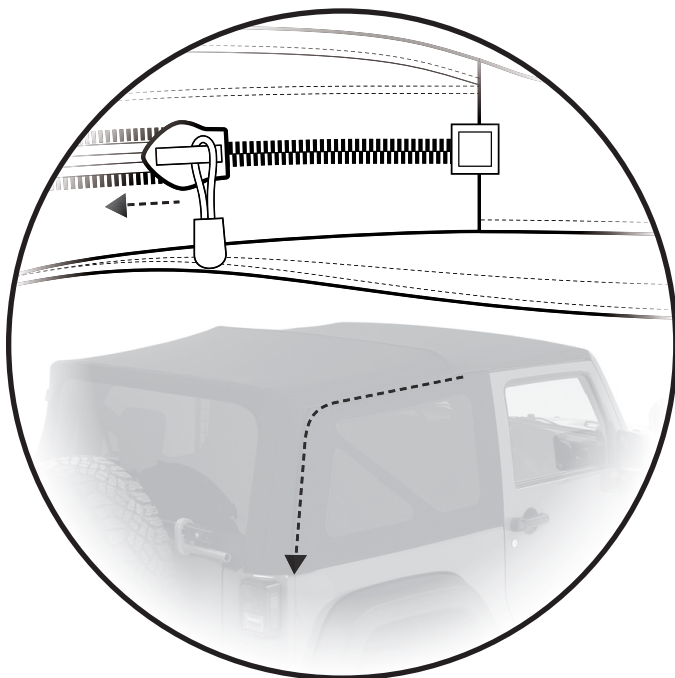

Finish zipping the Right Side Window completely closed.

Repeat for the Left Side Window.

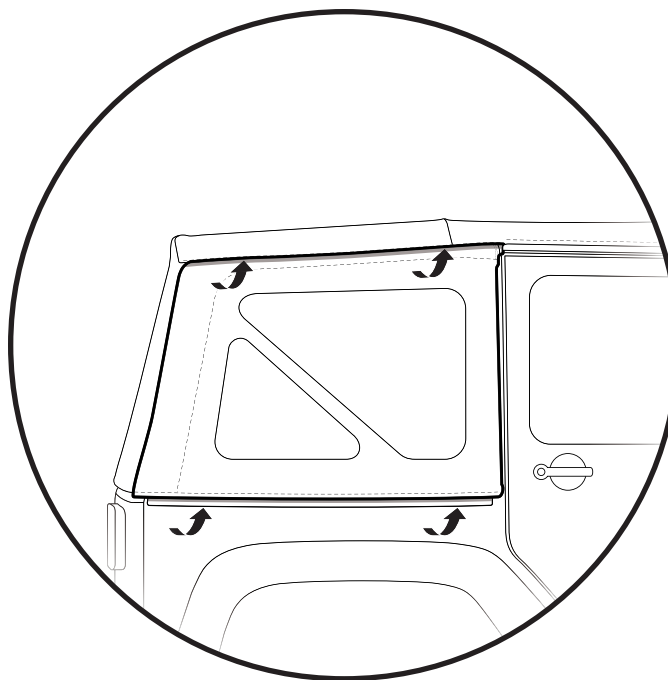

Tuck the plastic strip along the bottom edge of the Right Side Window under the Jeep belt rail, by rolling it up underneath the belt rail.

Repeat for the Left Side Window



WARNING

When operating the vehicle without the Side Windows, remove the Rear Window for proper ventilation.




AVERTISSEMENT

Retirez la vitre arrière afin d'obtenir une bonne ventilation si les vitres de custode ne sont pas utilisées alors que le véhicule fonctionne.




ADVERTENCIA

Cuando el vehículo funcione sin ventanas de los cuartos traseros, quite el medallón para asegurar la ventilación adecuada.

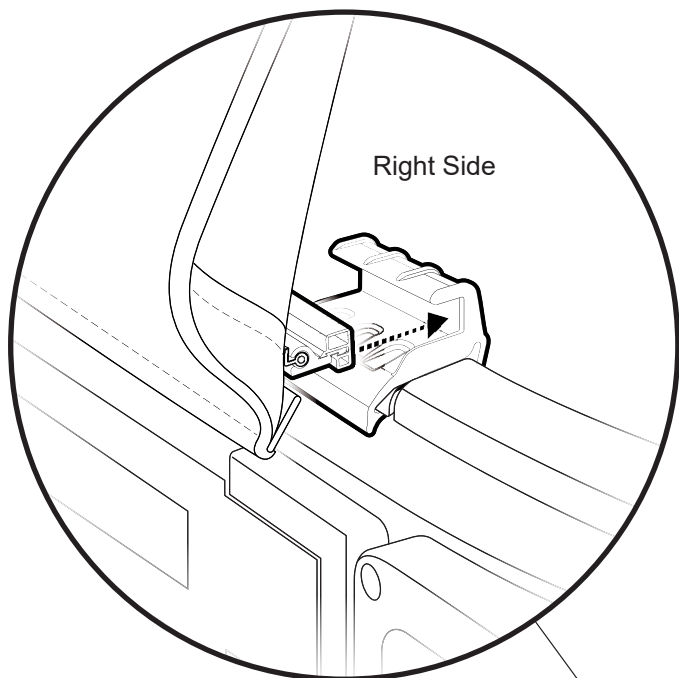


Snap the front edge of the Tailgate Bar into the channel on the Tailgate Bar Mount.


Repeat for the left side.

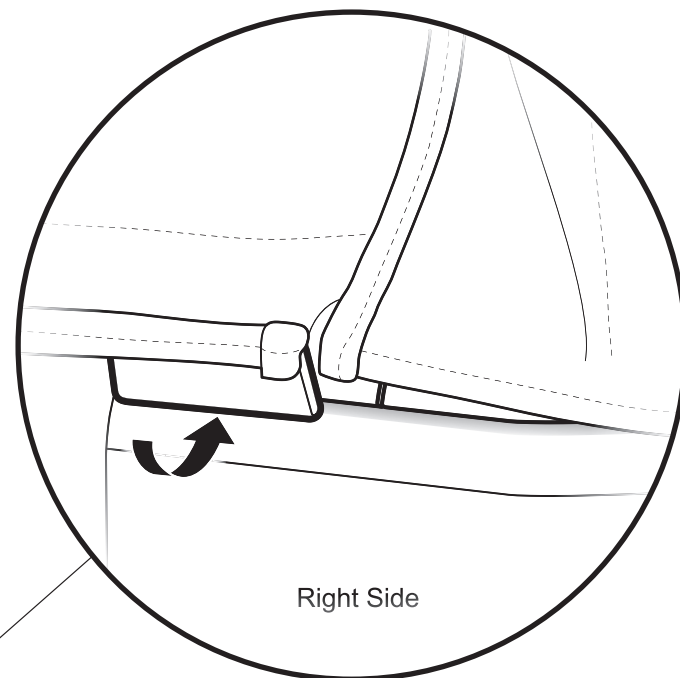

Tuck the plastic tab at the bottom right corner of the Rear Window under the Jeep belt rail, by rolling it up underneath the belt rail.


Repeat for the left side.

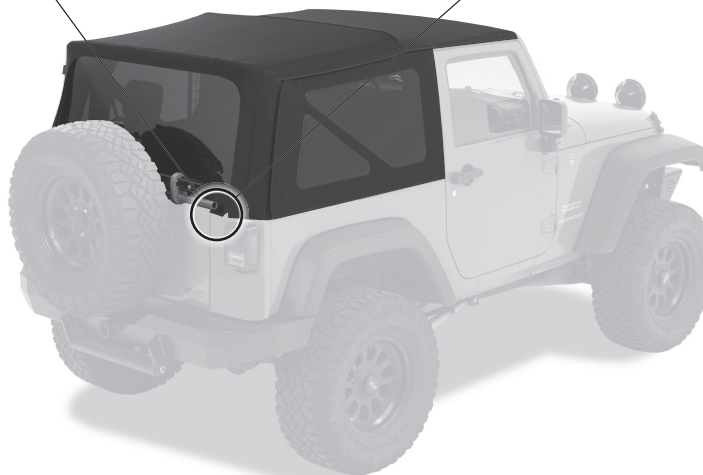

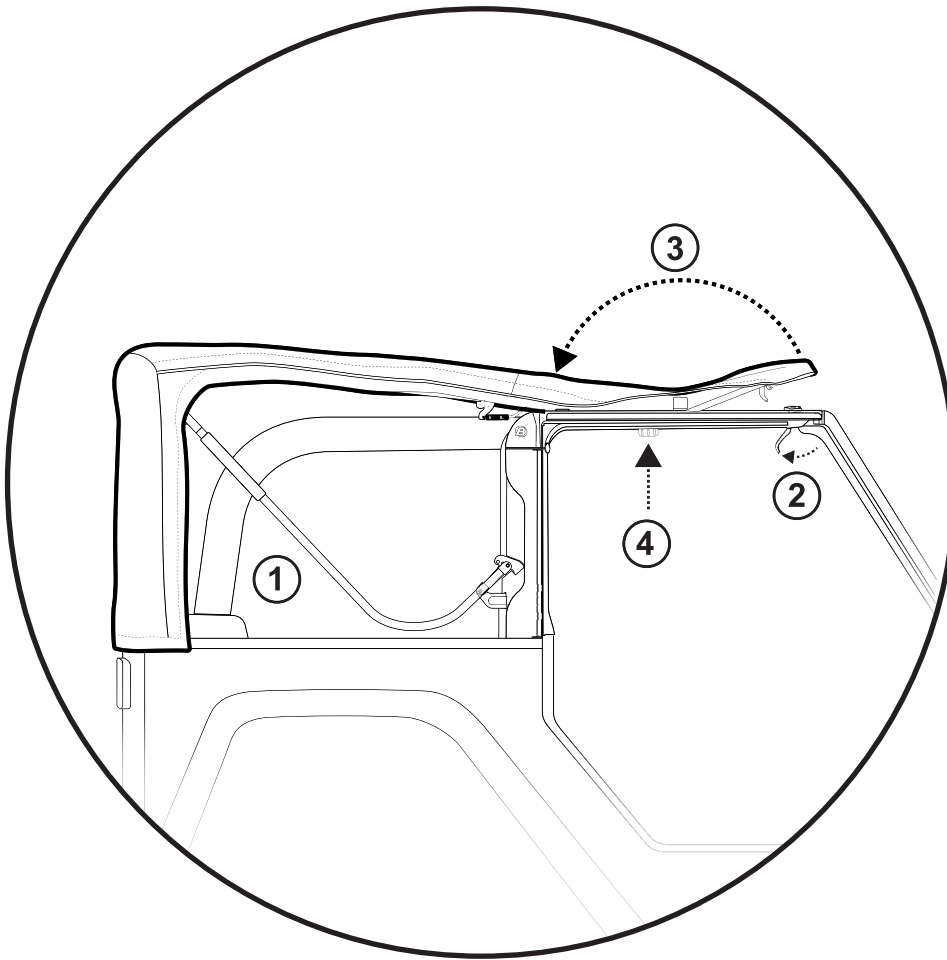

Remove all three of the rear windows.

Release the windshield latches.
Fold the front header back, keeping the fabric folded neatly. Push down on the spring-catch lever to release the side bows.

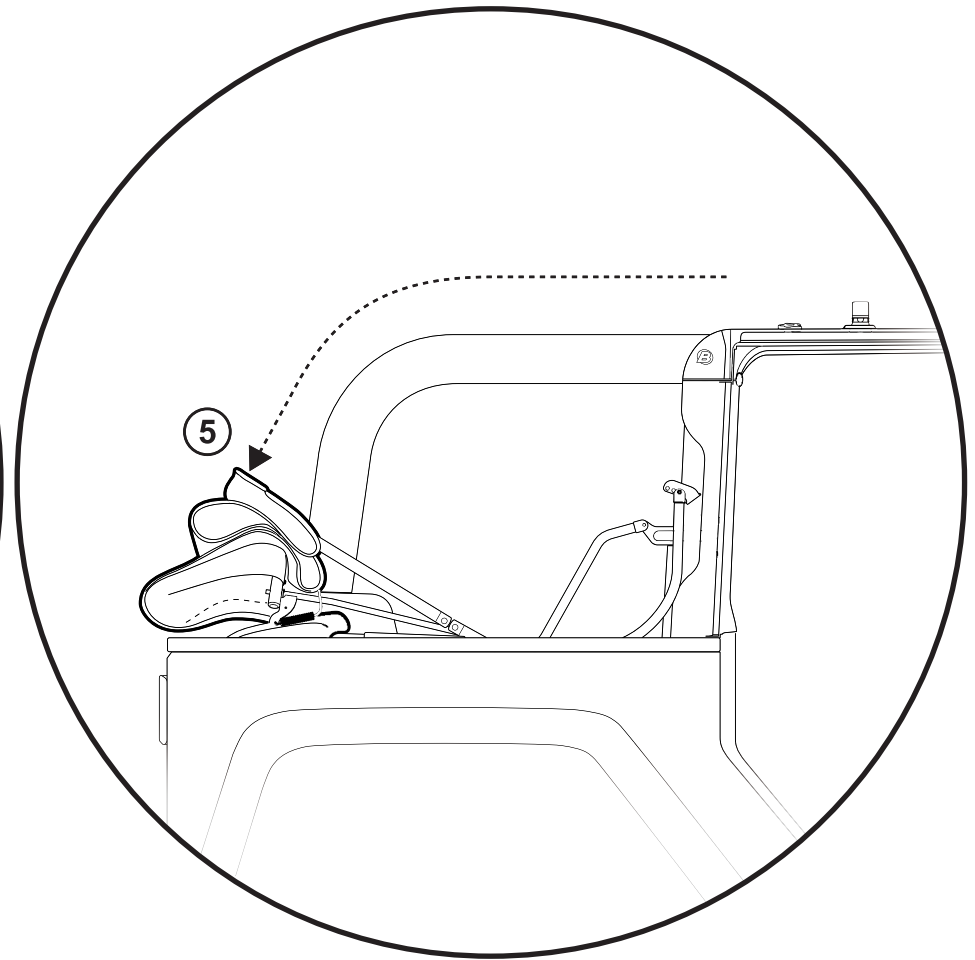

Lift the fabric and bow assembly and swing it back to the rear of the Jeep, resting the entire assembly on the top edge of the Jeep belt rail. Arrange the fabric neatly and wrap the rear legs of the top around the assembly, and secure them under the top. Tuck the fabric in around the edges.



Care and Maintenance of your Bestop Product

Your Bestop product is made of the finest materials available. To keep it looking new and for the maximum possible wear, it will need periodic cleaning and maintenance.


Fabric: The fabric should be washed often using soap, warm water and a soft bristle brush. Rinse with clear water to remove all traces of soap. Bestop recommends using Bestop Cleaner (part no. 11201-00) and Bestop Protectant (part no. 11202-00) for Vinyl fabric and Bestop Twill Protectant (part no. 11207-00) for Twill fabric. Bestop Cleaner and Bestop protectant are specially formulated to provide a total cleaning and protection system. Bestop Cleaner safely removes the toughest stains, will not harm vehicle finishes, is biodegradable and environmentally friendly. Bestop Protectant protects against UV-fading, cracking and hardening, and repels dust, grease, dirt and mildew.

Windows: Keep windows clean to avoid scratching. DO NOT use a brush on the windows! Wash with a water-soaked cloth or sponge and a mild dishwashing detergent. Bestop recommends Bestop Vinyl Window Cleaner (part no. 11203-00), which safely cleans and protects vinyl windows and helps prevent UV damage. NEVER WIPE THE WINDOWS WHEN THEY ARE DRY. Be careful when cleaning snow or frost from the vinyl windows since they are easily scratched and may crack at low temperatures. DO NOT roll the sides or rear window in cold weather. The windows become stiff and will crack. Cracks caused by misuse in cold temperatures are not covered under warranty.

Water: Seeping through at the seams may be stopped by applying 3-M Scotchgard® on the inside of the seams.

Snap: Keep snaps cleaned and lubricated with silicone to help prevent snaps from sticking to the studs. If a snap does become stuck to a stud, use a screwdriver and GENTLY pry apart to prevent permanent damage to the snap or the top fabric.

Zippers: Keeping zippers cleaned and lubricated with Bestop's Zipper Cleaner (part no. 11206-00) will help prevent damage and keep the zippers in smooth working condition. If a zipper opens behind the slider, the slider may have been spread apart. This problem can usually be repaired by using an ordinary pair of pliers to bring the sides back into parallel. Return slider to the end of the zipper in the normal Open position. Squeeze lightly at first and test the zipper. If the zipper continues to remain open squeeze more firmly with the pliers and try the zipper again. Repeat this procedure until the zipper operates correctly.

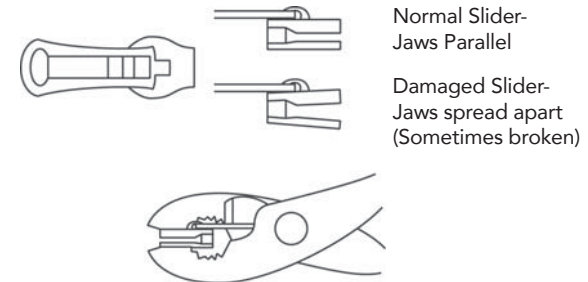

For Bestop Warranty Information, Please go to;
<https://www.bestop.com/help/warranty-information/>

